


# Detachable Ergonomic office chair installation instruction

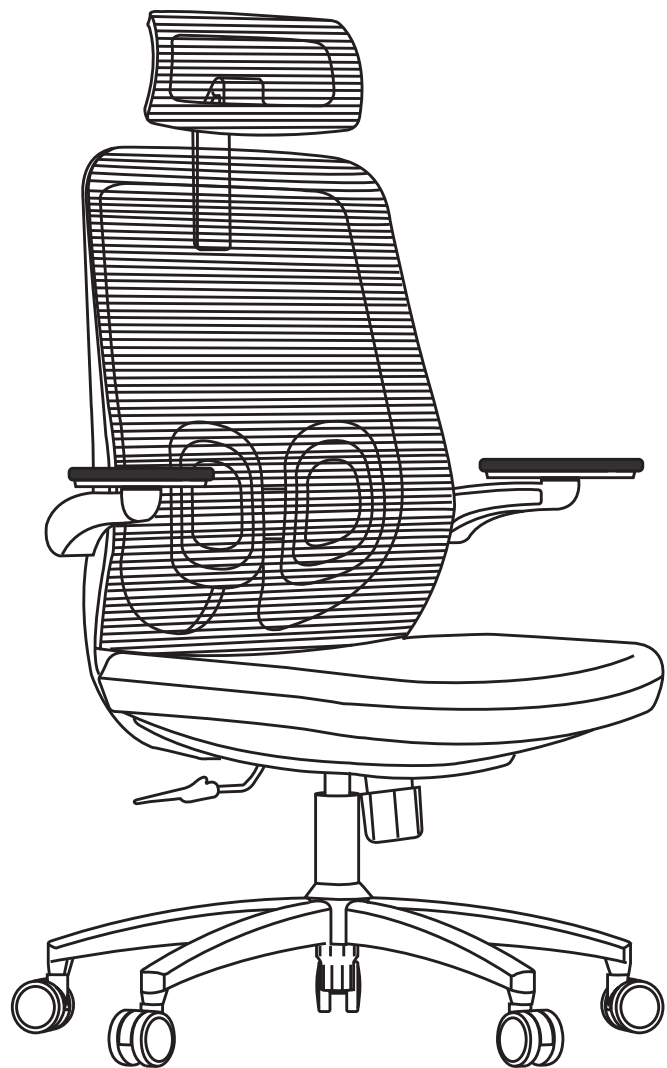

Products size: 64\*63\*100 (108) cm



## spare part list

PU casters 5pcs	Aluminum heel 5pcs	Aluminum alloy heel connector	cap of aluminum heel	screws 2pcs	headrest 1pcs	Air rod 1pcs	wrench
	Armrest 2pcs	Gasket 4pcs	Backframe screws M6X45 5pcs	Chassis screws (M6*35) 4pcs			
	Backframe 1pcs	Armrest screws 2pcs	Headrest screws 2pcs	Headrest screws cover cap 2pcs	Cushion 1pcs	Mechanism components 1pcs	

## Installation manual

Connect the aluminum five-star foot

10pcs M6\*15 Screws

**1** Install the five-star-foot.

4pcs screws

4pcs Gaskets

Remark: The four screws of the chassis must be spacers.

**2** Install the air rod and casters to the five-star-foot.

4pcs screws

4pcs Gaskets

Remark: The four screws of the chassis must be spacers.

**3** Connect 4 M6\*35 screws + Gaskets to the cushion and the mechanism components.

Remark: Backframe connect 5pcs screws

Screws 5pcs

**4** Connect 5 M6\*45 screws to the backframe and the seat plate.

Remark: Plastic spacers must be installed on the screws before latch the armrests.

**5** Latch the two armrests M8\*40, and cover with the cap.

Install 2 small screws and cover with screw caps.

**6** After the headrest is assembled, the upper part of the chair is aligned with the air rod and installed.