




## Drill Mounting Instructions

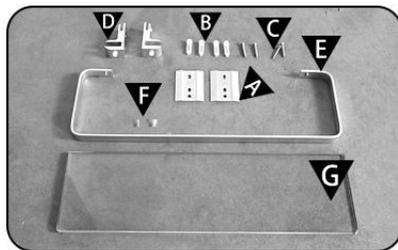


All parts:A,B,C,D,E,F,G

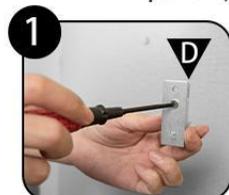


1. Take off the screw which is on the "D"

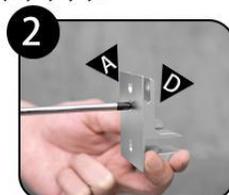

2. From the backside use the screw which take off from D to fasten "A", "D"

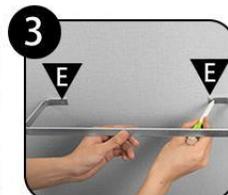


3. mark two top mounting holes(total four holes)

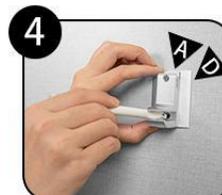


4. Align the first marked hole then mark the under hole



5. Drill four 6mm holes into your indicators

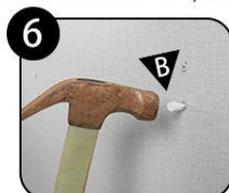


6. Use a hammer to drive "B" into the wall

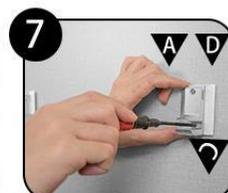

7. Use screw "C" to fasten the bracket to the wall from under hole




8. Insert the guard bar "E"

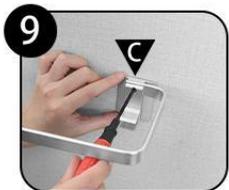

9. Use screw "C" to fasten the bracket to the wall from the top hole



10. Cover "F" on the top hole


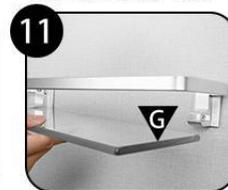


11. Insert the glass




12. Underneath the glass, fasten plastic screw


Bathroom Shelf with  
Towel Bar  
Drill Mounting Instructions

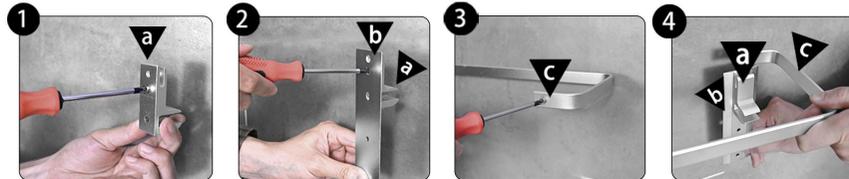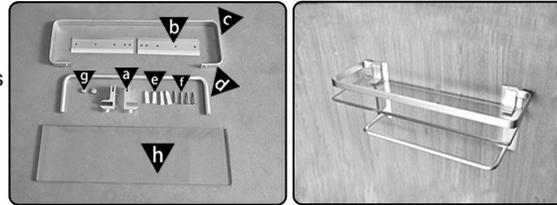


1. Take off the screw which is on the "a"  
2. Use this screw to fasten "a" and "b"  
3. Take off the screw which is on the "c"  
4. Combine "c" and "a" "b"

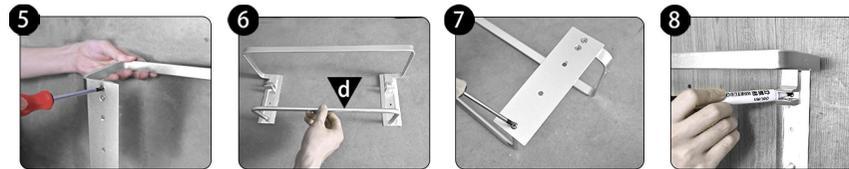

5. Fasten "a" "b" "c" by screw which is take off from "c"  
6. Connect "d" to the last hole  
7. Fasten it by a screw which take off from "d"  
8. Mark drill position

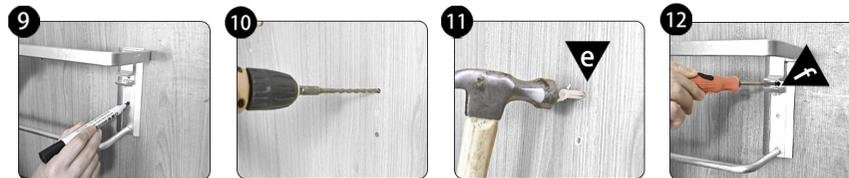

9. Mark drill position of another one  
10. Drill 6mm holes in to your indicators  
11. Use a hammer to drive "e" into the wall  
12. Use "f" to fasten the bracket to the wall

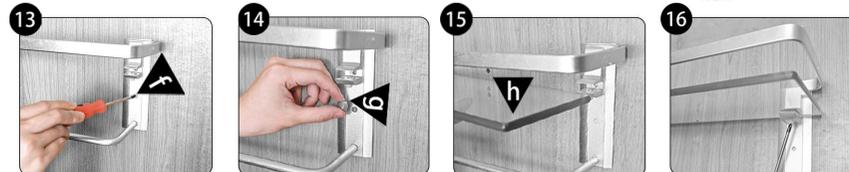

13. Use "f" to fasten the bracket to the wall  
14. Cover "g" on the screw  
15. Insert the glass  
16. Underneath the glass, fasten plastic screw