



# ASSEMBLY INSTRUCTION


1. 100% fully tightened






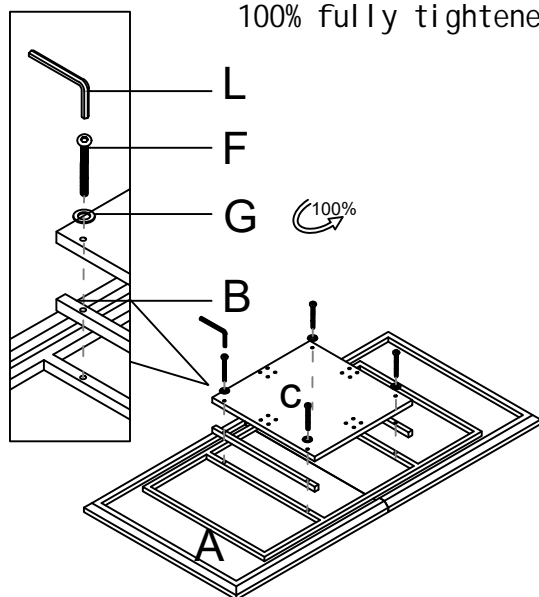

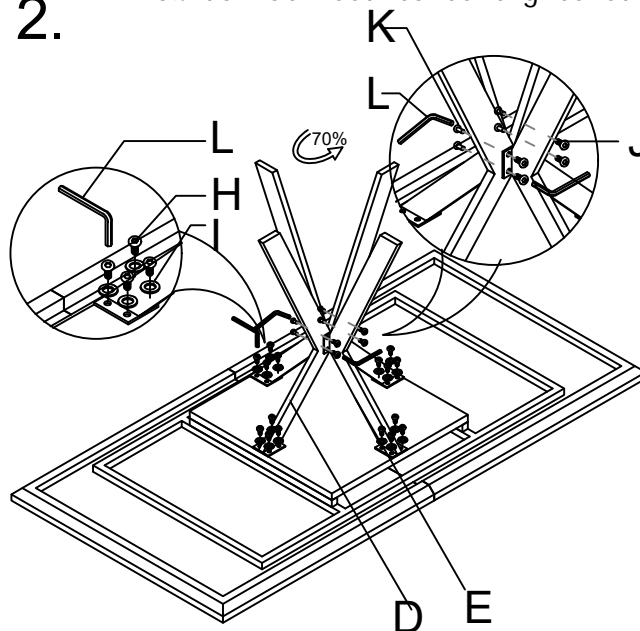



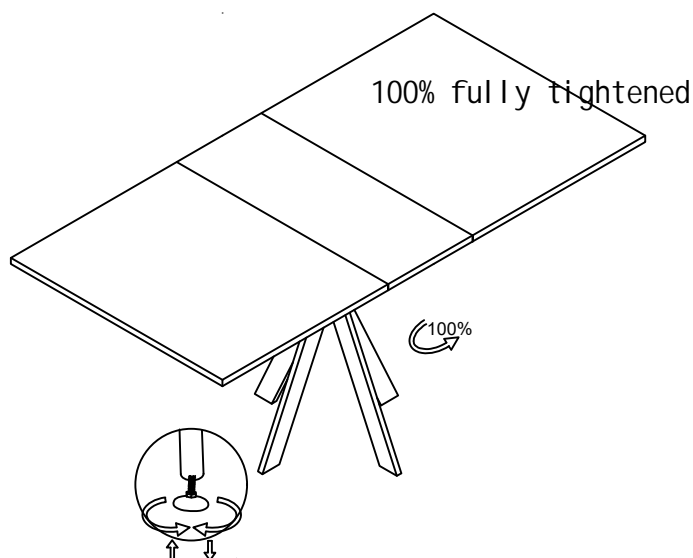


2. 70% do not need to be tightened



3.



<p>A</p>  <p>X1</p>	<p>B</p>  <p>X2</p>	<p>C</p>  <p>X1</p>	<p>D</p>  <p>X2</p>	<p>E</p>  <p>X2</p>	<p>F</p>  <p>M8X70 X4</p>
<p>G</p>  <p>M8X20 X4</p>	<p>H</p>  <p>M6X25 X16</p>	<p>I</p>  <p>M6X16 X16</p>	<p>J</p>  <p>M8X15 X4</p>	<p>K</p>  <p>M8X20 X4</p>	<p>L</p>  <p>5# X2</p>