






User Manual






ASSEMBLY INSTRUCTION

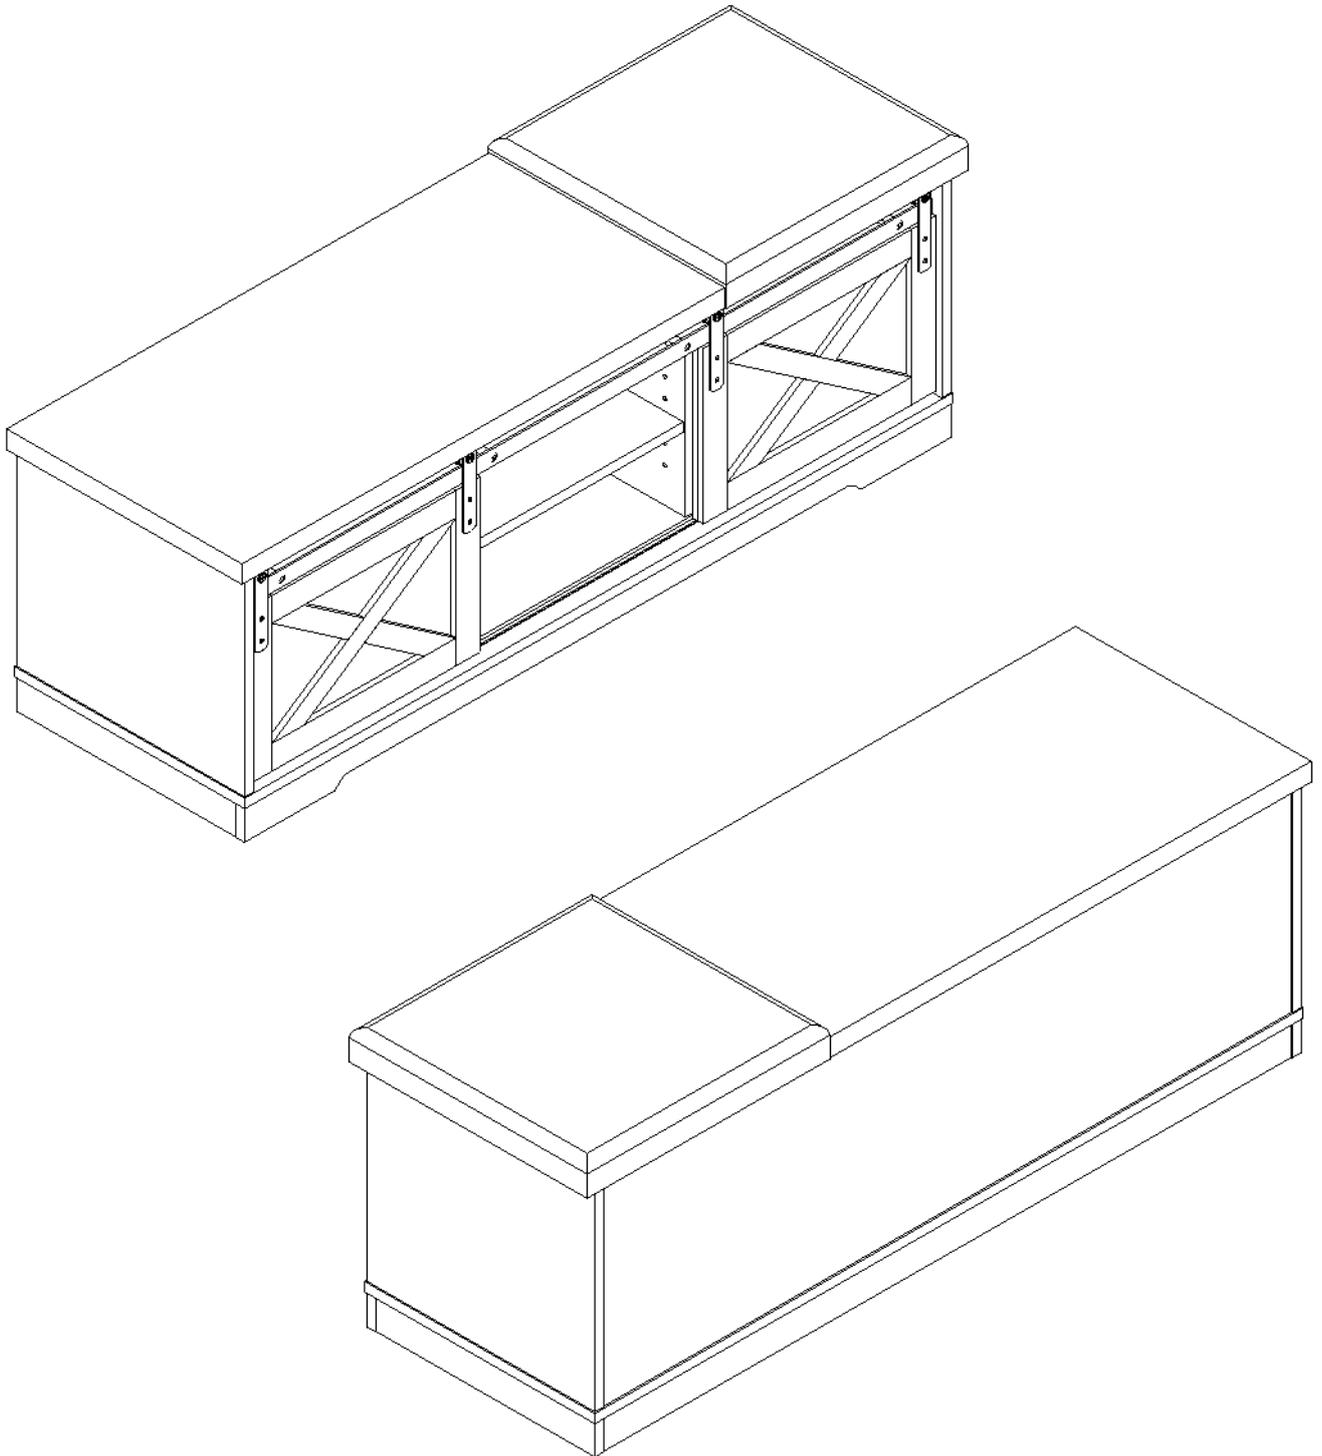

CD-086


Parts List

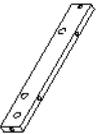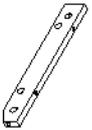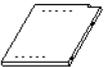
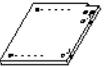
NO.	Drawing	Dimension	QTY
1		1140*50*15mm	*1
2		363*50*15mm	*1
3		363*50*15mm	*1
4		347*50*15mm	*1
5		1172*50*15mm	*1
6		1174*382*15mm	*1
7		1140*60*15mm	*1
8		320*322*15mm	*1
9		320*322*15mm	*1

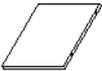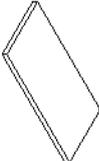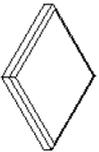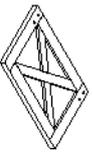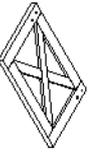NO.	Drawing	Dimension	QTY
10		1140*320*15mm	*1
11		320*378*15mm	*1
12		320*378*15mm	*1
13		800*390*30mm	*1
14		400*390*60mm	*1
15		368*320*15mm	*3
16		385*254*18mm	*1
17		385*254*18mm	*1


Hardware Fitting

NO.	Drawing	QTY
A	 6*55mm	*40
B		*40
C		*2
D		*2
E		*4
F	 L=1134mm	*1
G		*4

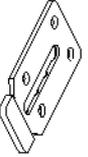
NO.	Drawing	QTY
H		*4
I		*4
J	 8*40mm	*1
K	 45*30*30mm	*4
L	 3.5*14mm	*40
M	 5*14mm	*12
N	 60*32mm	*4

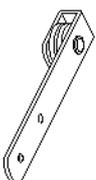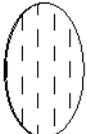NO.	Drawing	QTY
O		*4
P	 3.5*14mm	*8
Q		*8
	 4mm	*1
	 6mm	*1
		*42

Split Graph

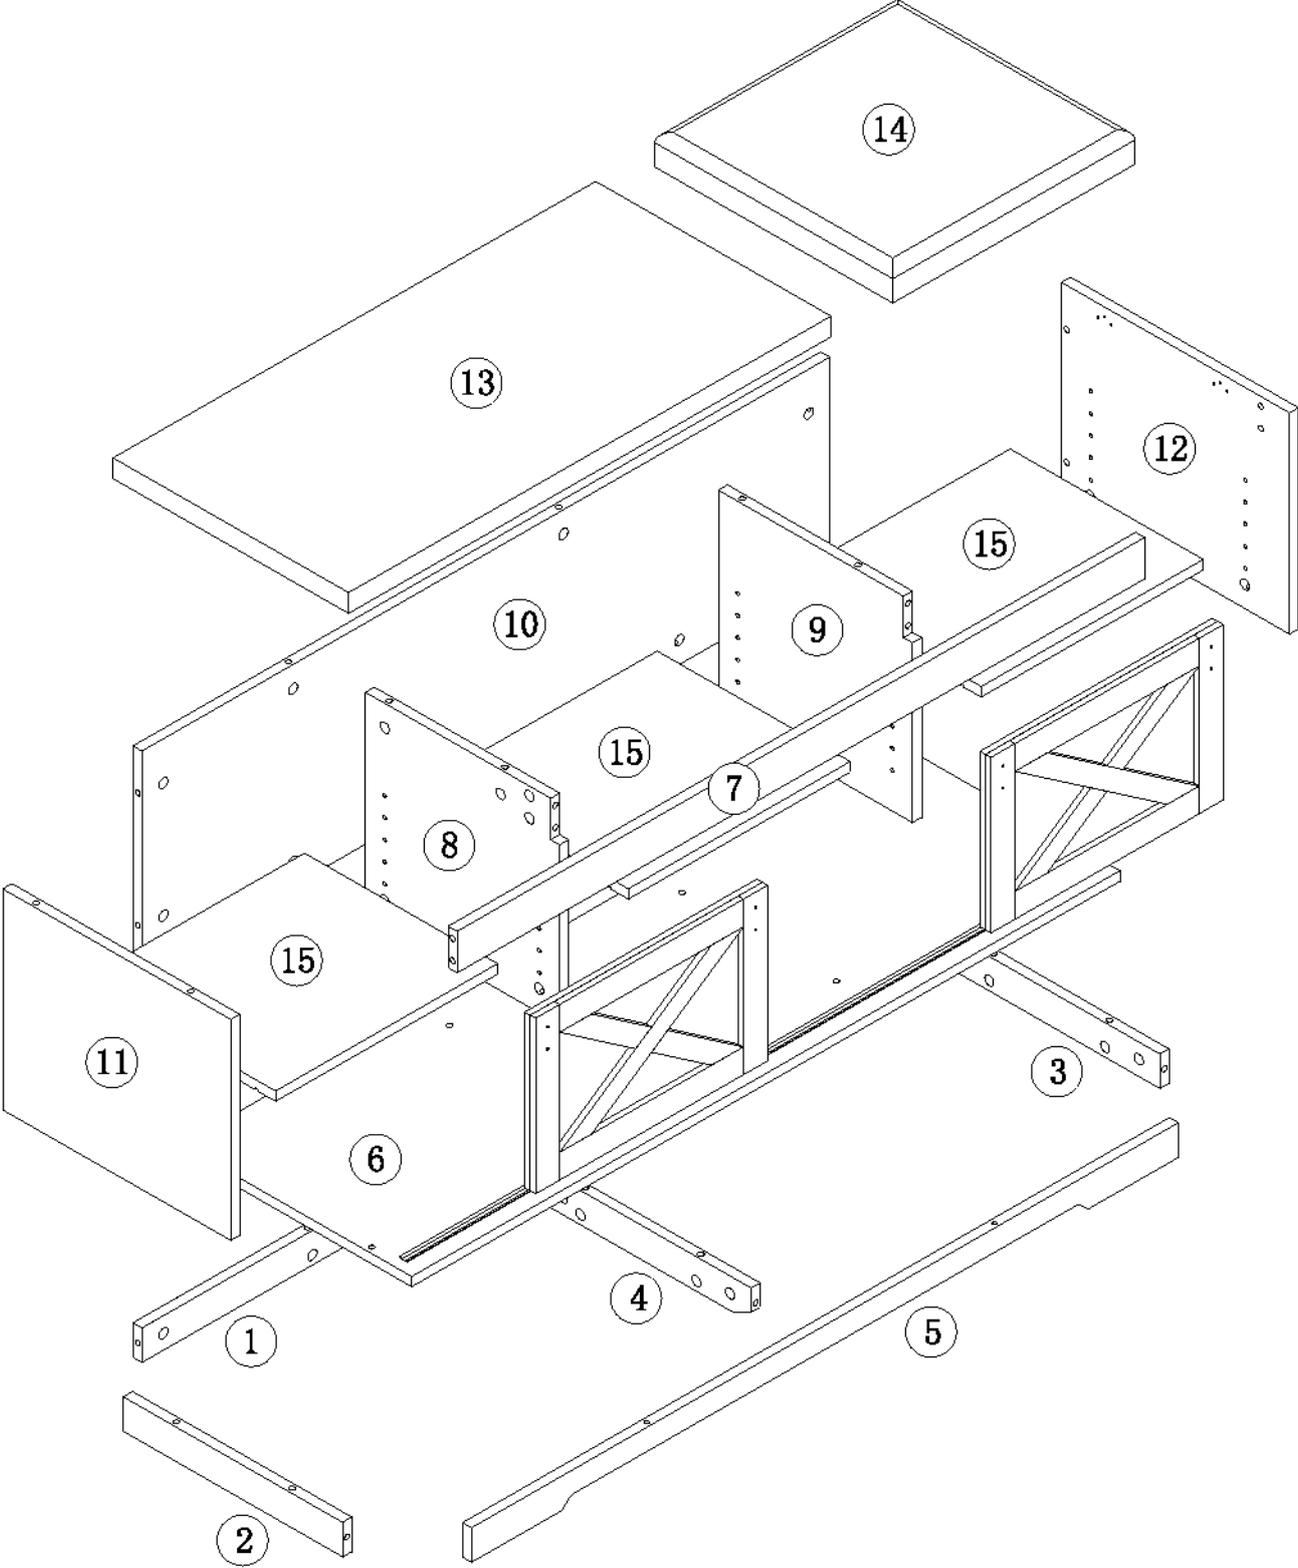


Cam Coupling Using Methods

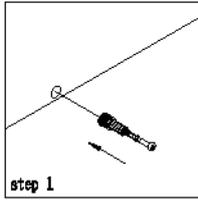


Step1.

Connect the cam coupling A as directed in the assembly instructions using hand.

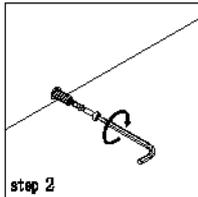


Step2.

Screw the cam coupling A as directed in the assembly instructions.

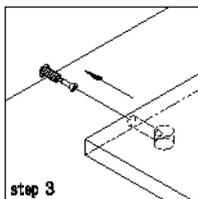


Step3.

Push the cam coupling A into the entry hole.

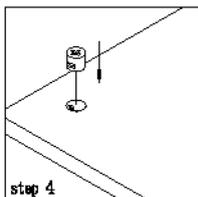


Step4.

Insert the cam coupling B as shown in the instructions.

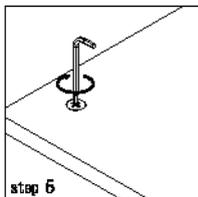


Step5.

Turn the cam coupling B clockwise with a screwdriver.

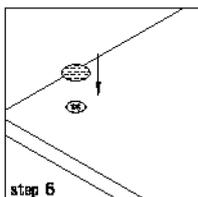

Step6.

Put on Beautycam.

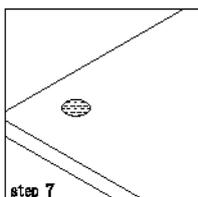


Step7.

Finished.

You should feel a click when the camlock is locked in place.

The joint is now secure.

Note: Cam Coupling Using Methods, please refer to Page No.5

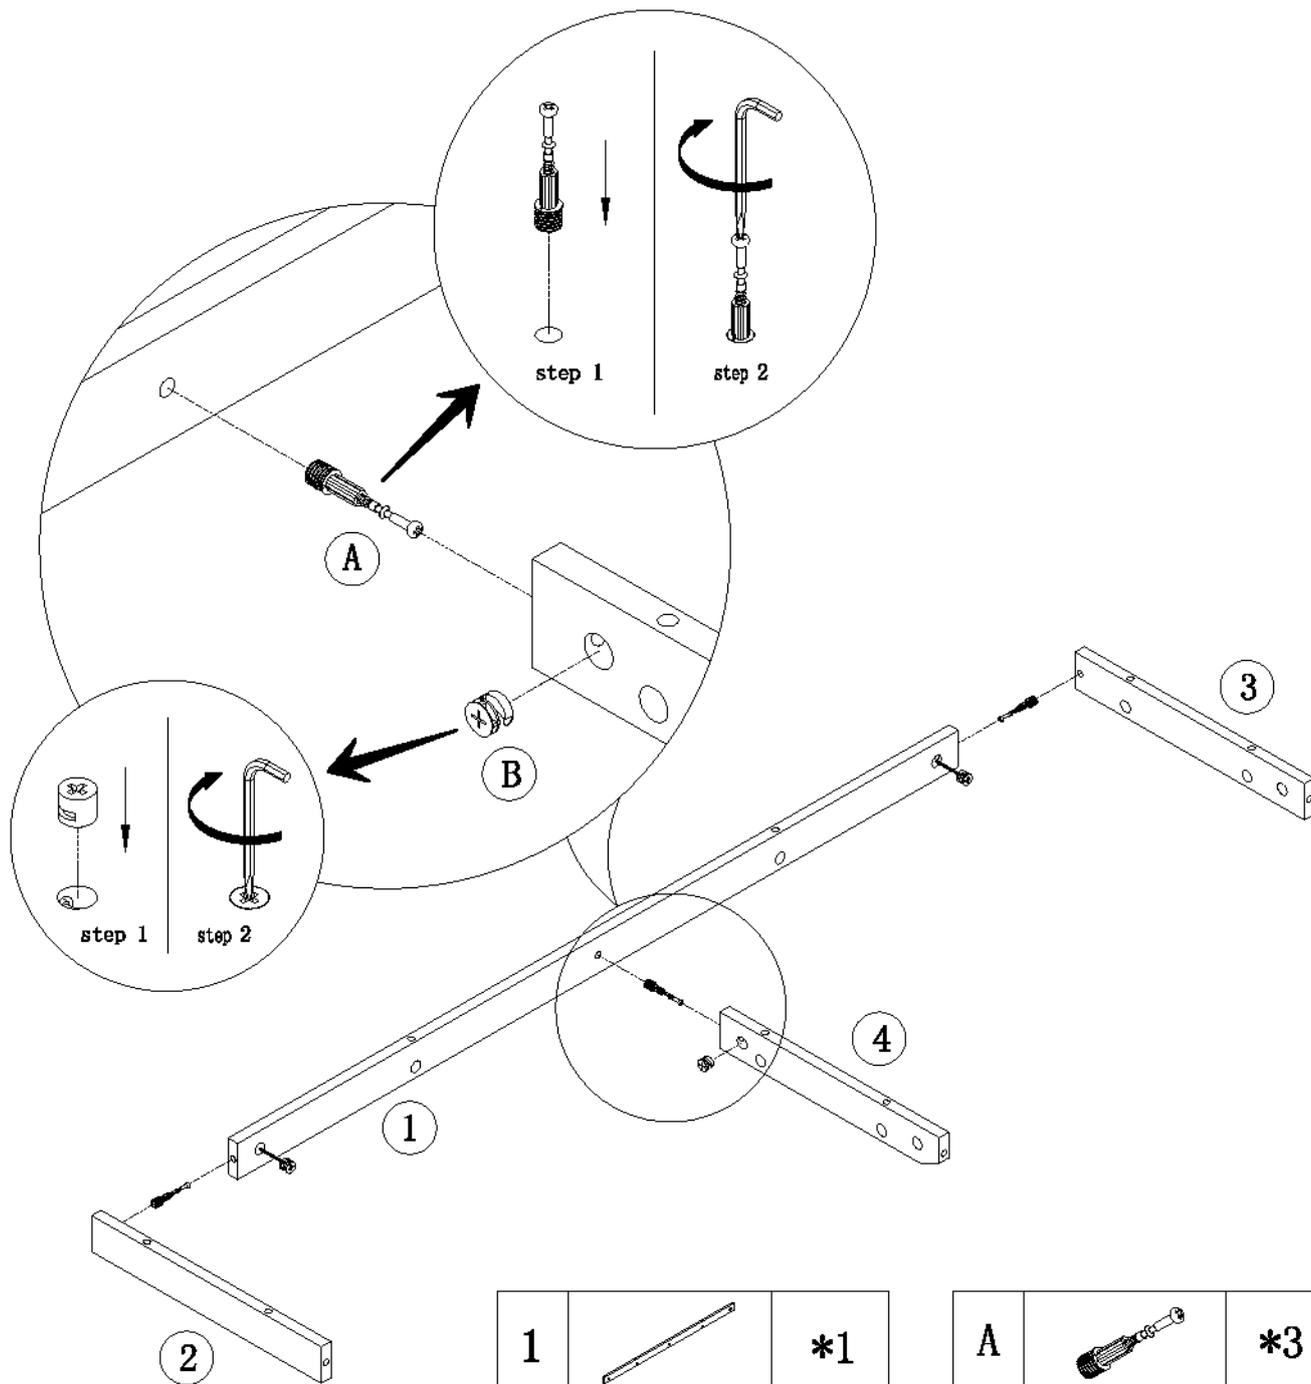


1		*1
2		*1
3		*1
4		*1

A		*3
B		*3

Step 1.

Connect Panel 2,3,4 to Panel 1 with Cam Coupling A&B.

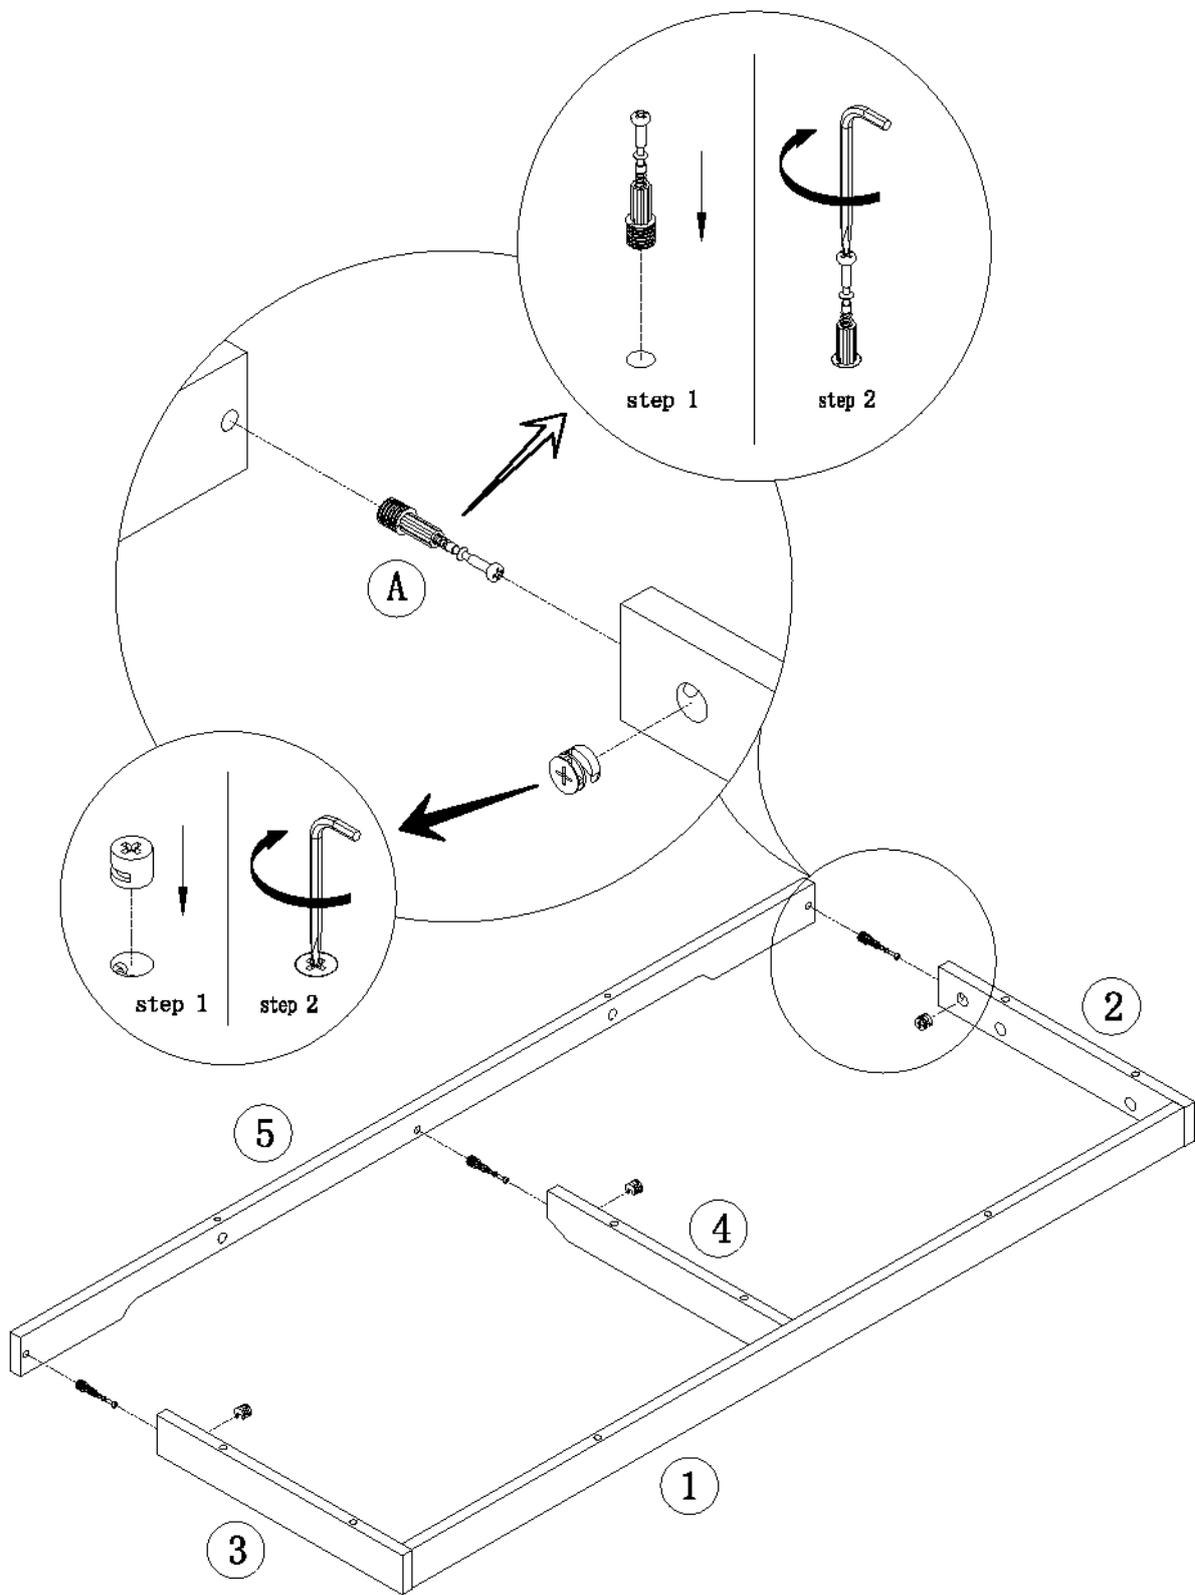


5		*1
---	---	----

A		*3
B		*3

Step 2.

Connect Panel 2,3,4 to Panel 5 with Cam Coupling A&B.

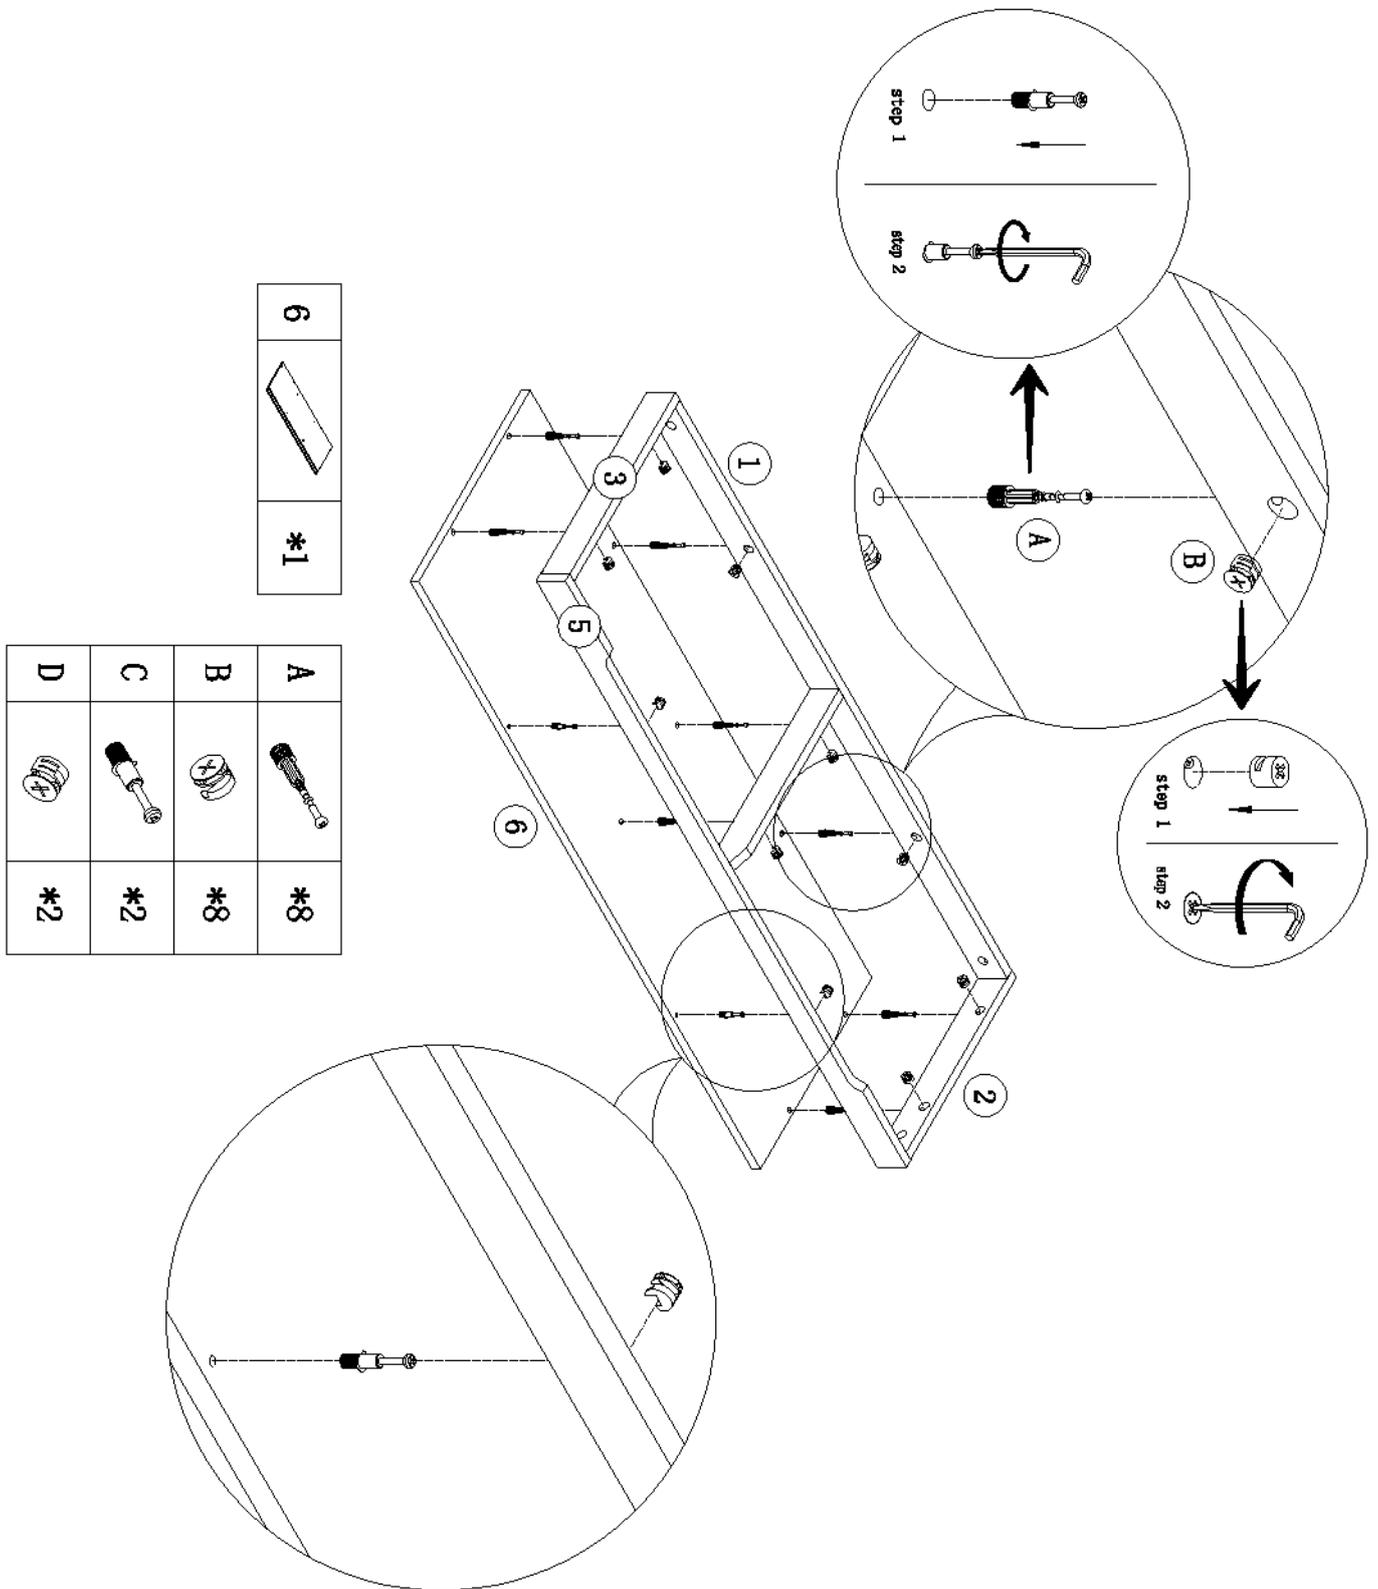


Step 3.

Connect Panel 1,2,3,4,5 to Panel 6 with Cam Coupling A&B.


7		*1
---	--	----

E		*4
F		*1
G		*4
H		*4
I		*4

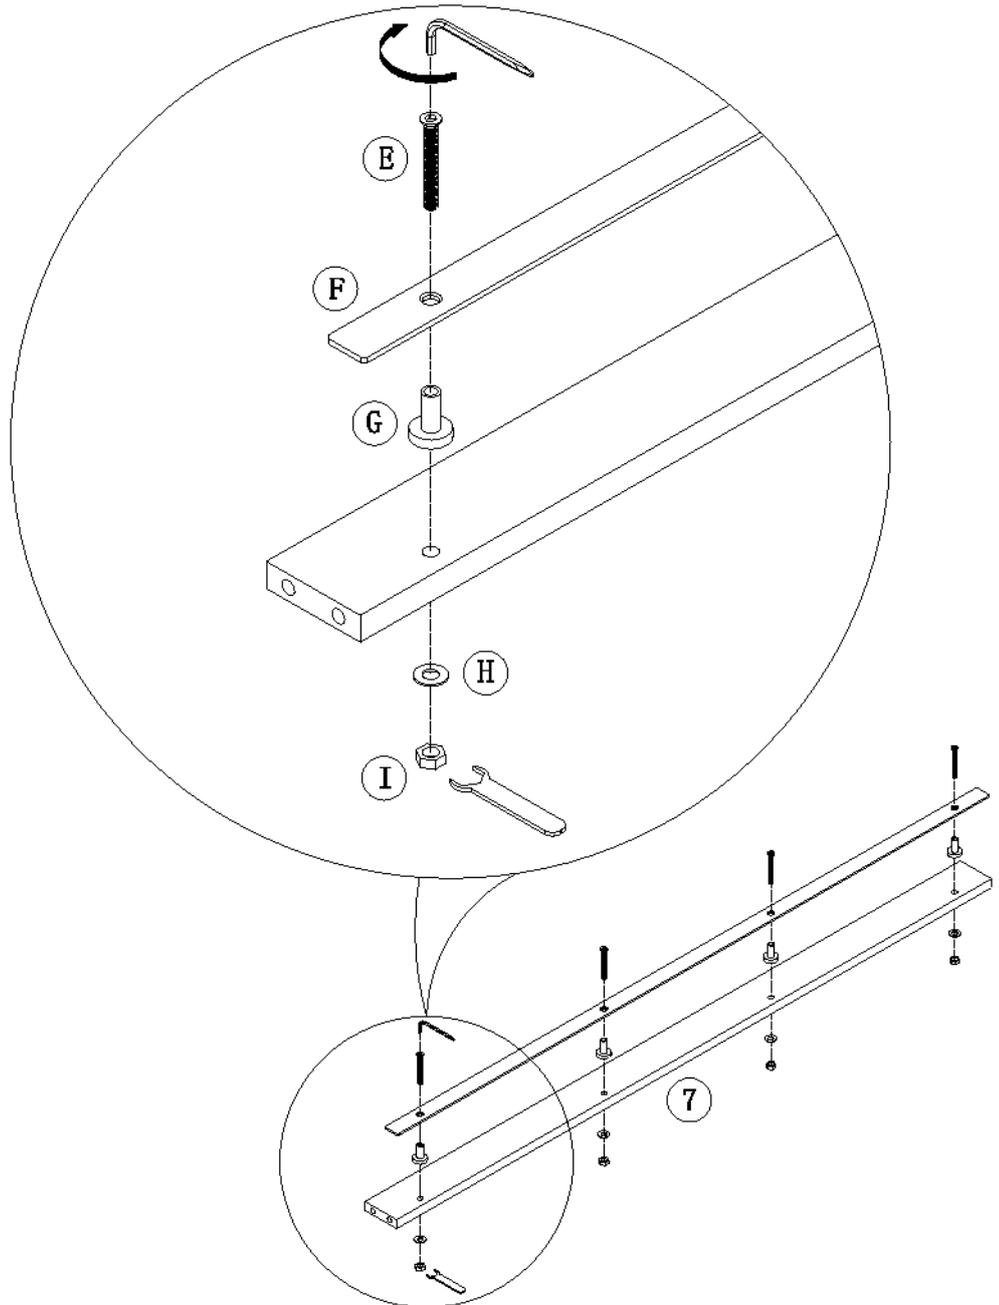

Step 4.

Combine Iron slide rail F on Panel 7 with E, G,H,I.

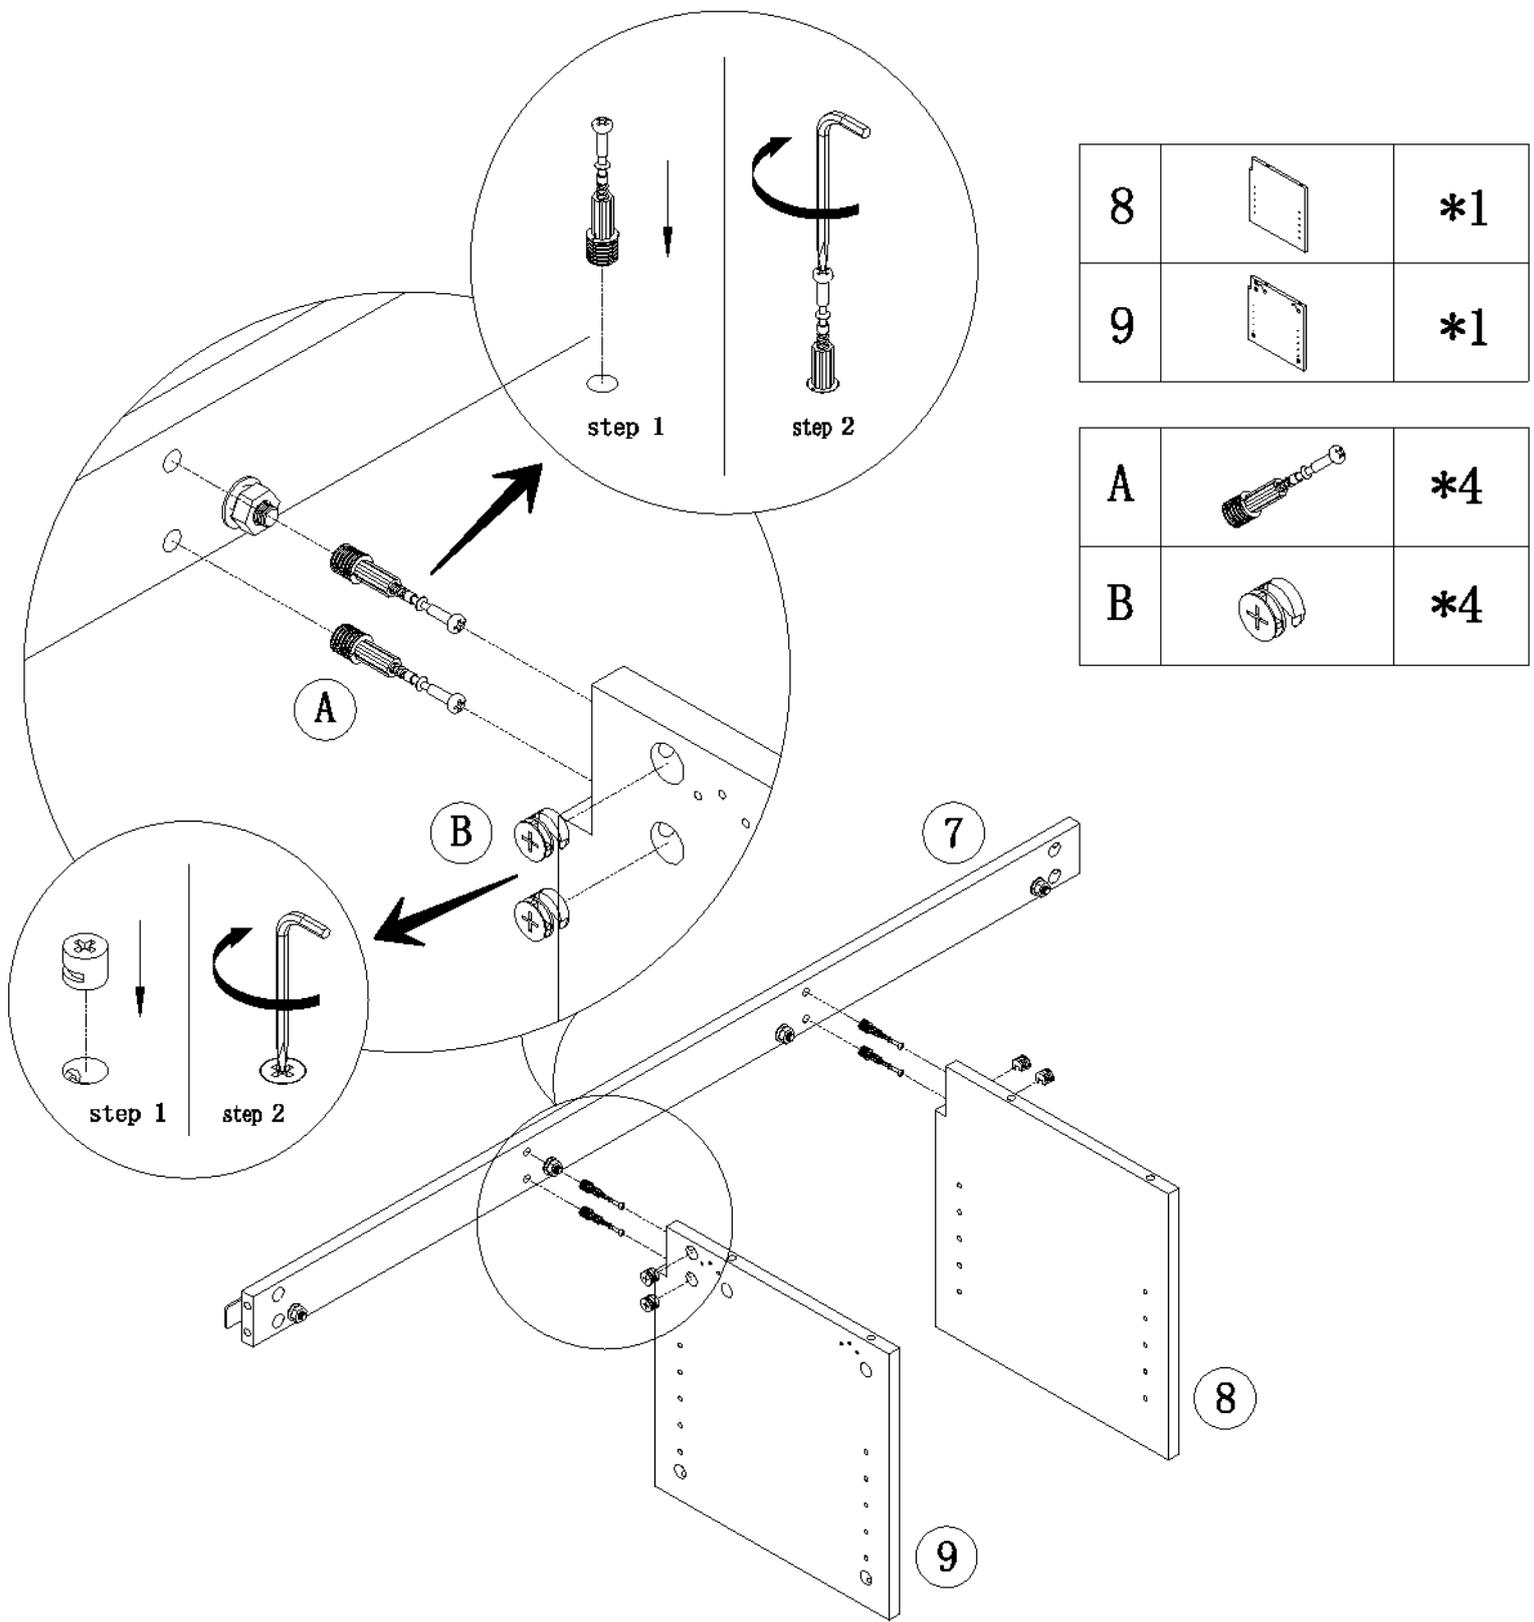


Step 5.

Connect Panel 8,9 to Panel 7 with Cam Coupling A&B.


10		*1
11		*1
12		*1

A		*4
B		*4

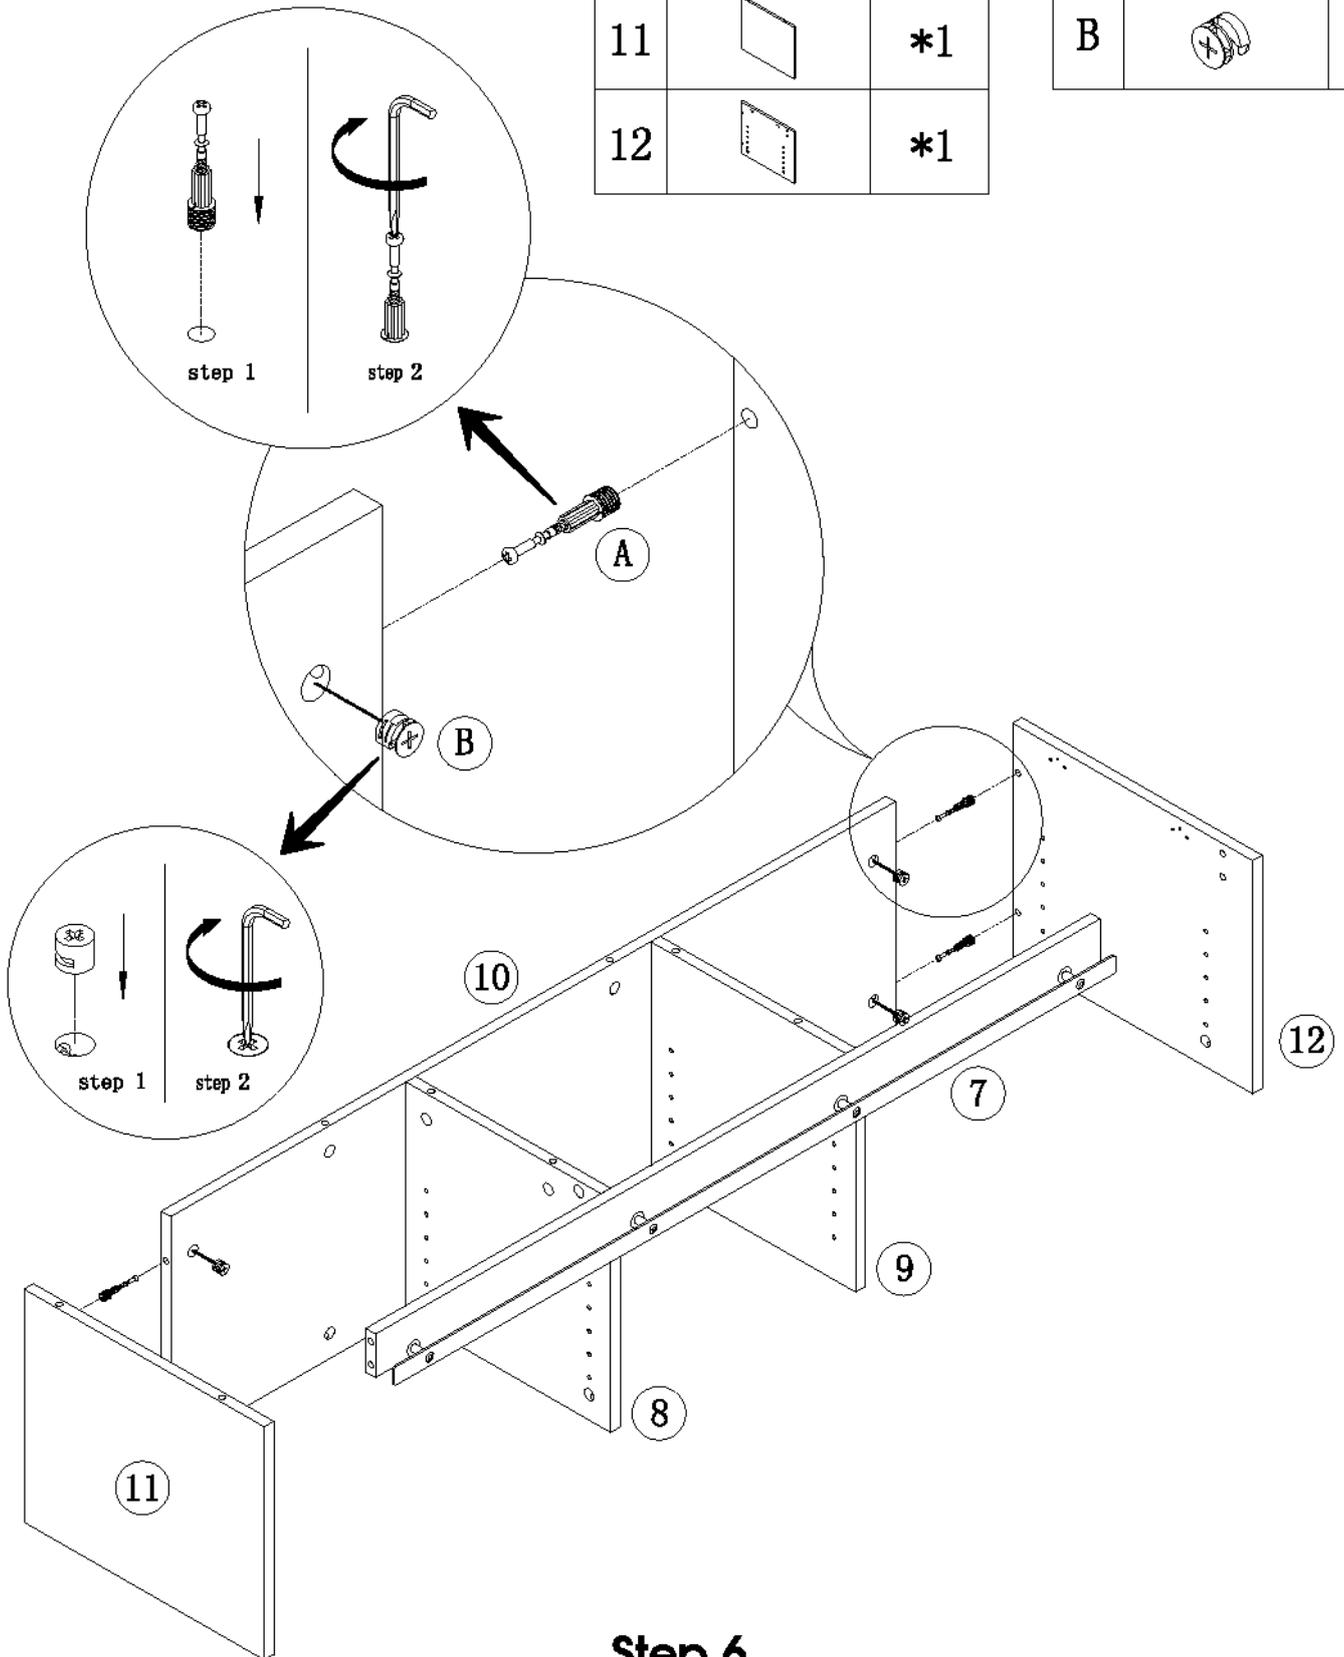


Step 6.

**Connect Panel 8,9 to Panel 10 with Cam Coupling A&B;
 Connect Panel 7,10 to Panel 11 with Cam Coupling A&B;
 Connect Panel 7,10 to Panel 12 with Cam Coupling A&B;**

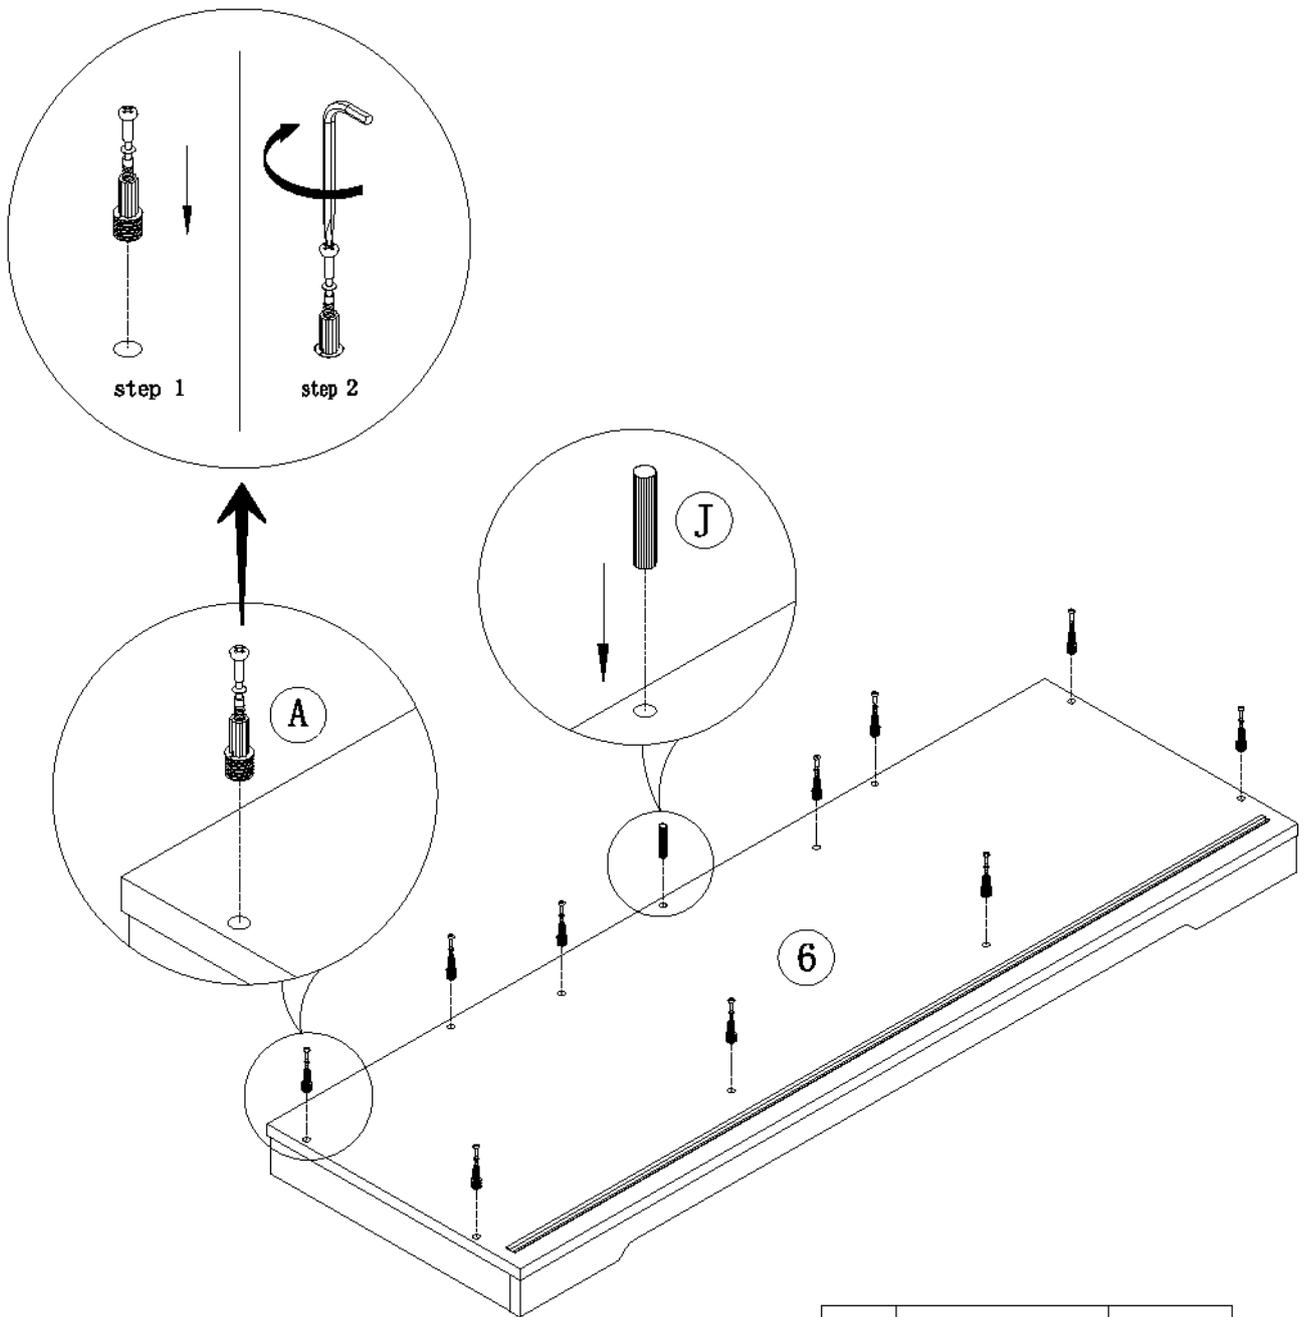


A		*10
J		*1

Step 7.
Insert J and A into Panel 6.

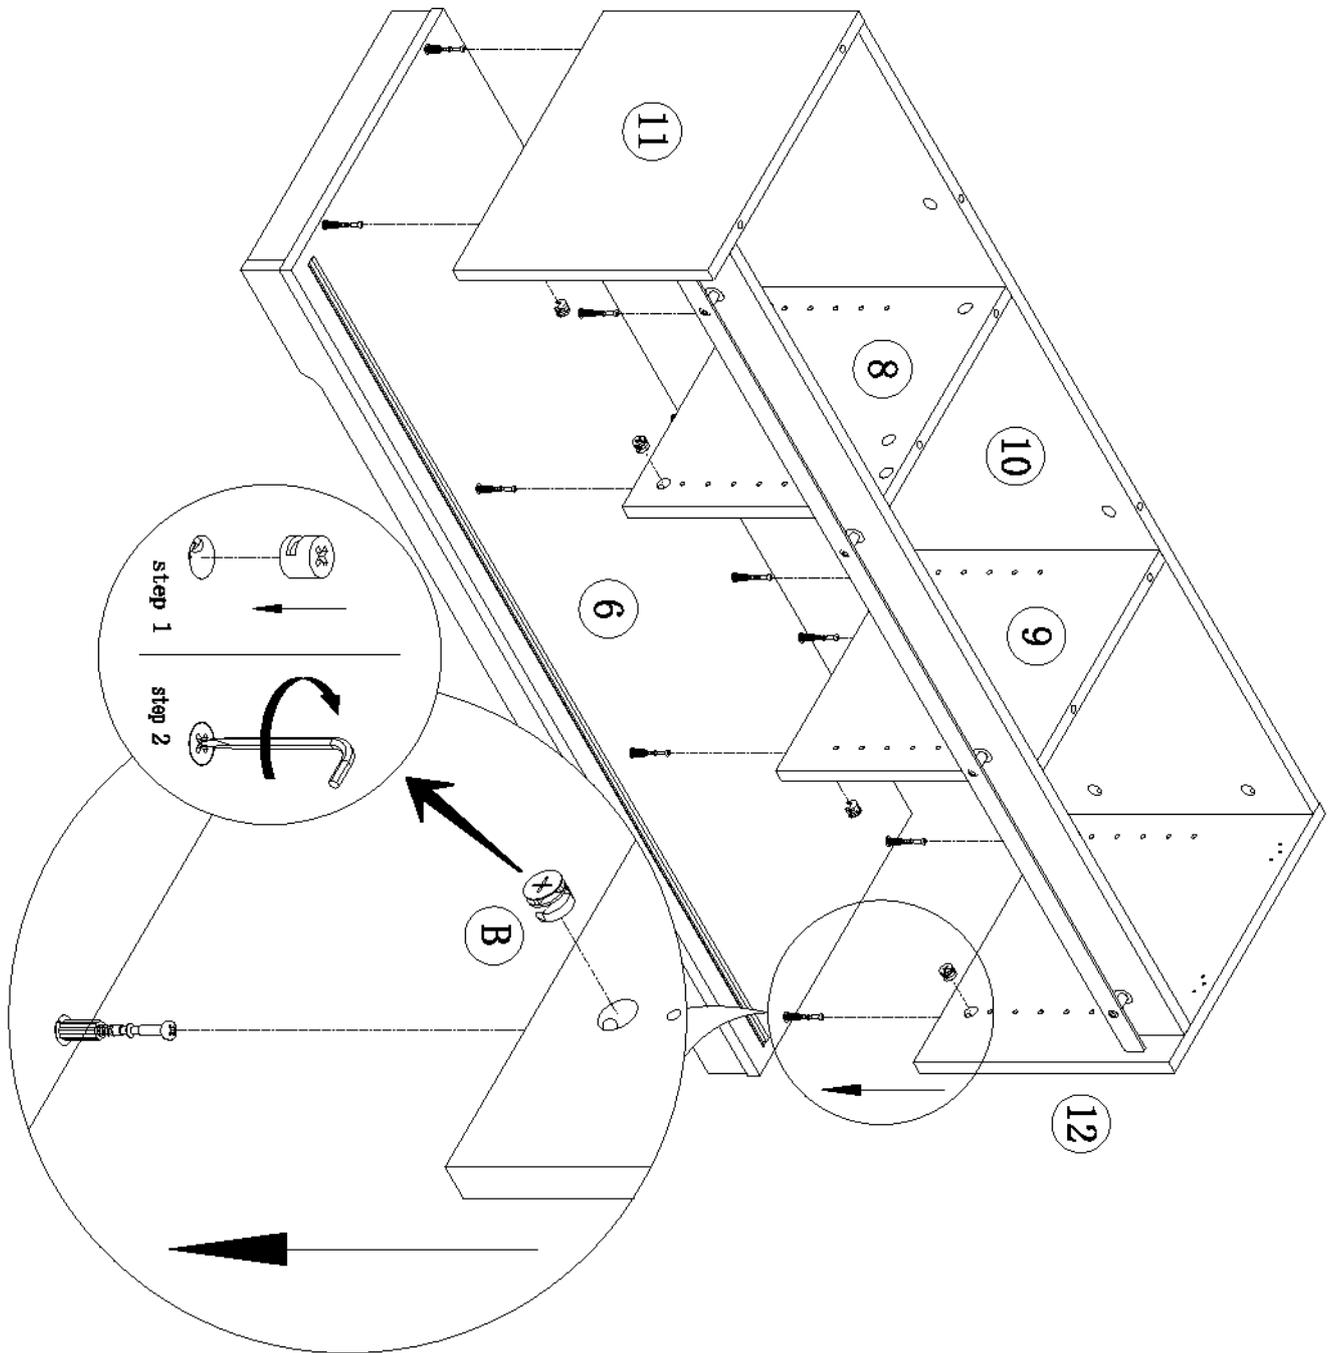

Step 8.

Connect Panel 8,9,10,11,12 to Panel 6 with Cam Coupling A&B.

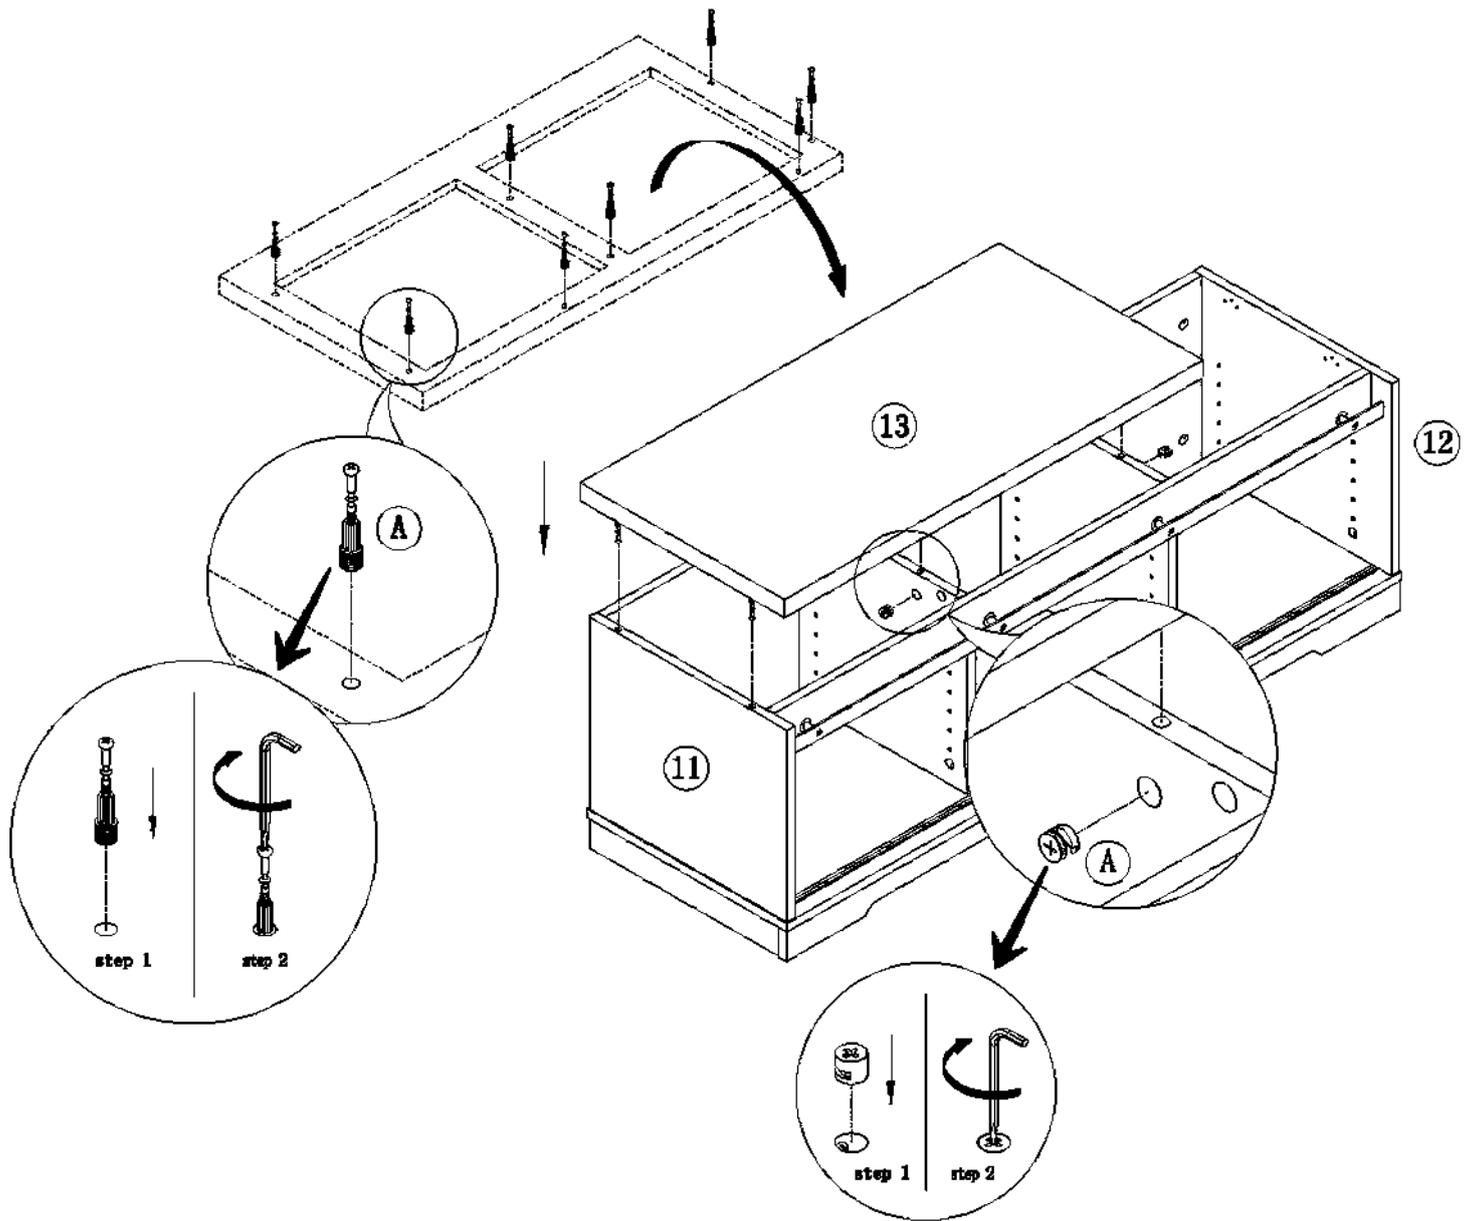

13		*1
----	---	----


A		*8
B		*8

Step 9.

Connect shoes cabinet top Panel


13 to the shoes cabinet body with Cam Coupling A&B.

L	K
 3.5*14mm	 45*30*30mm
*12	*4

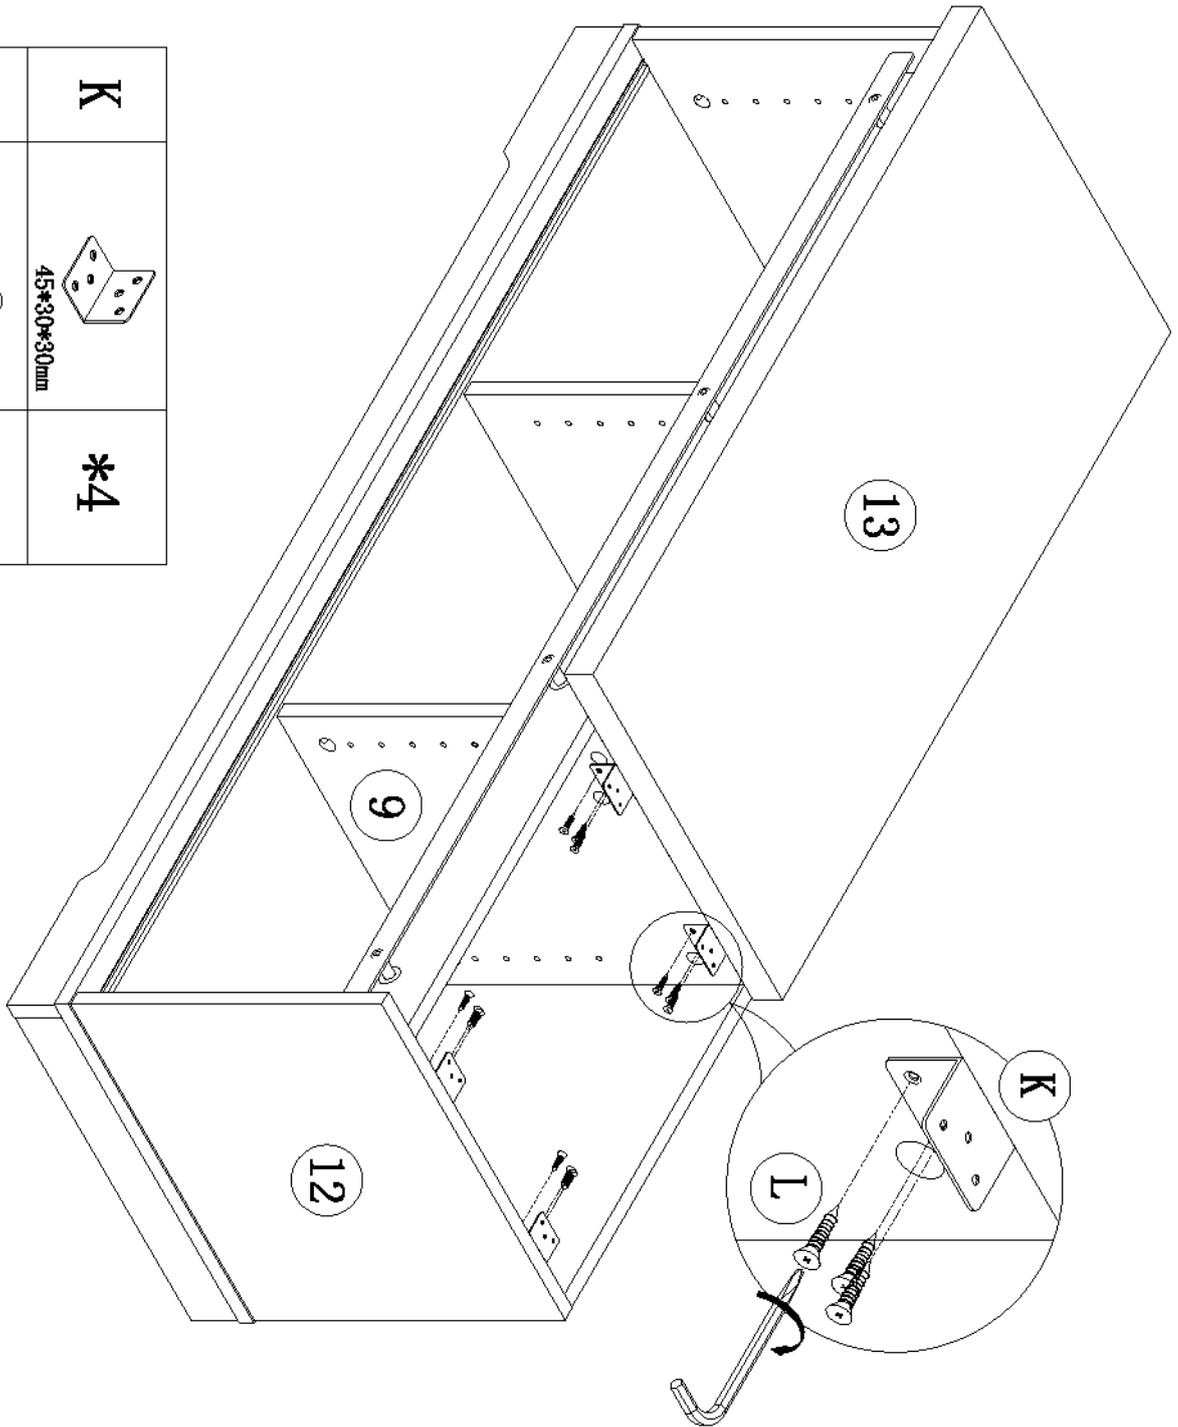


Step 10.

Fix bracket K on Panel 9,10,12 by Screw L.

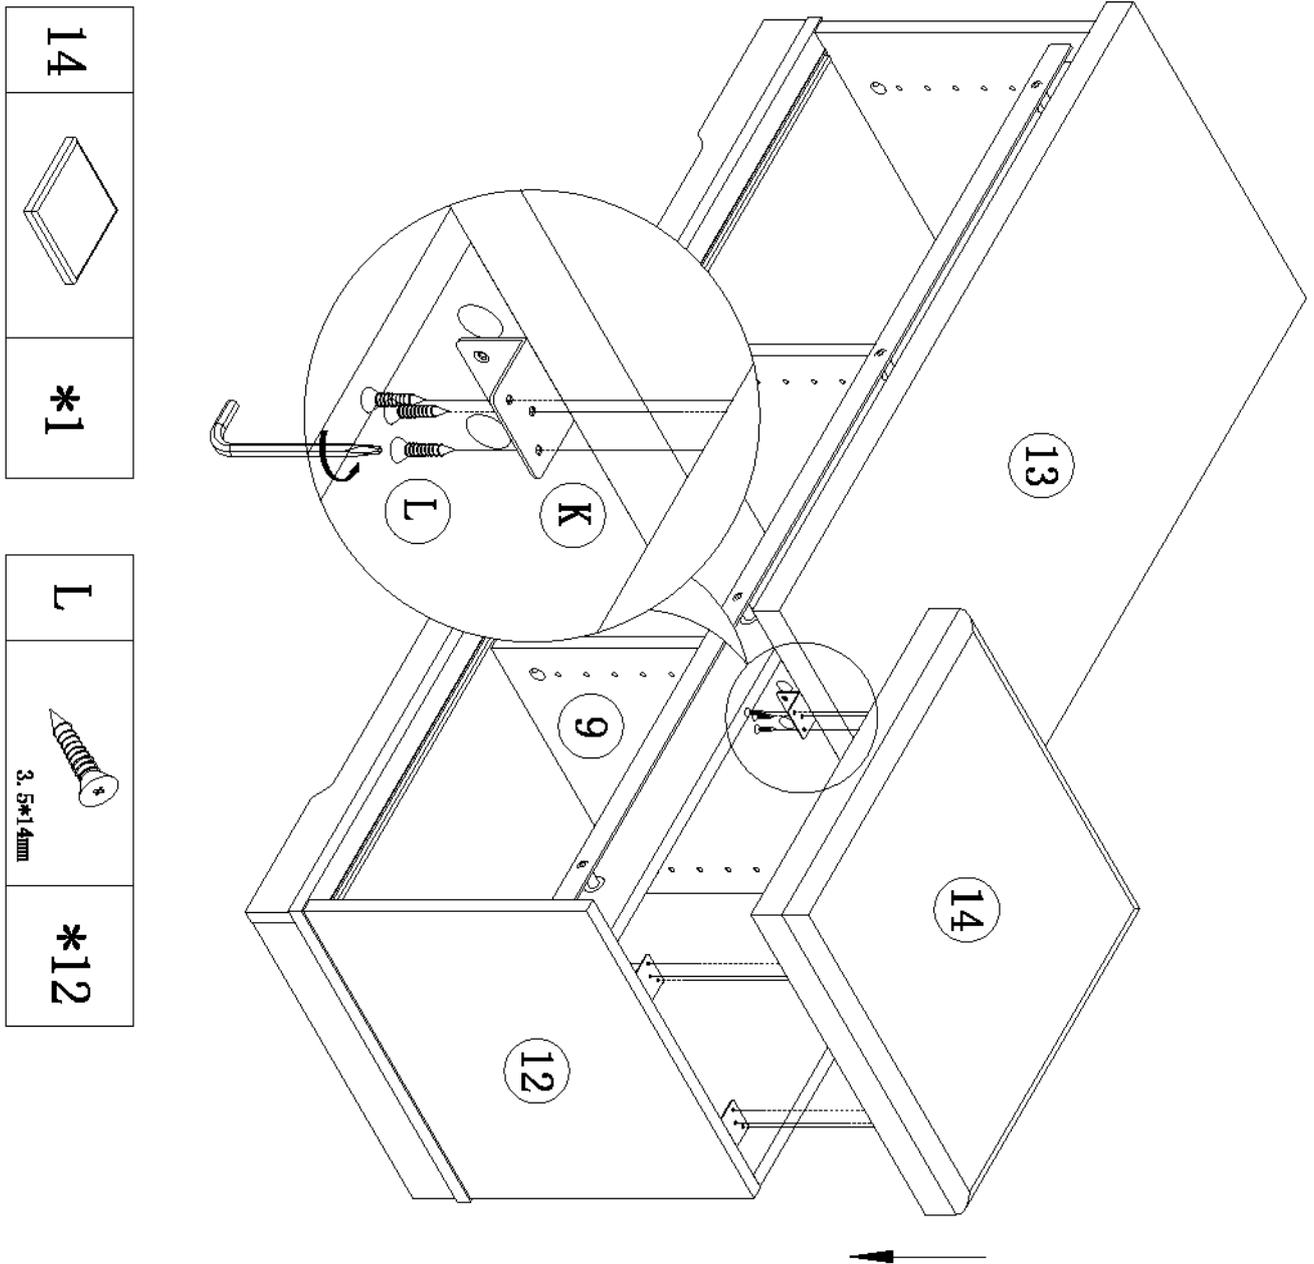


Step 11.
fix K on panel 14 by Screw L.

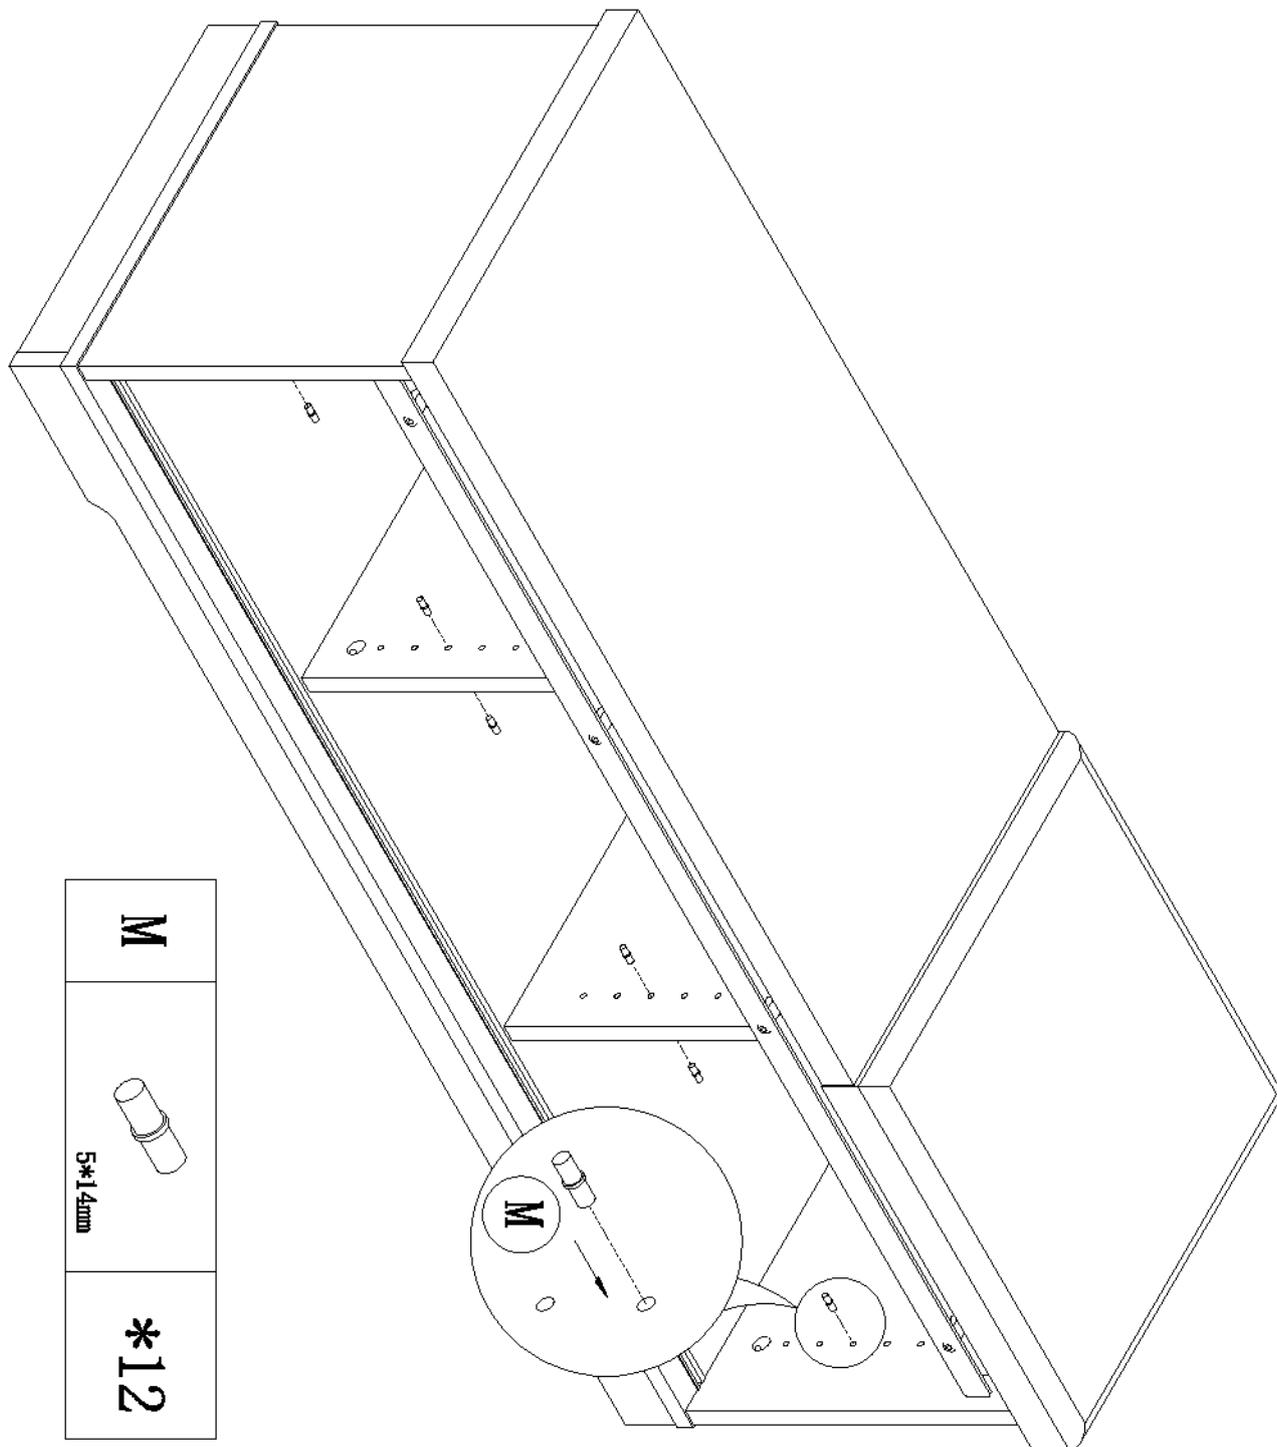



Step 12.


Insert metal part M into Panel 8,9,11,12.

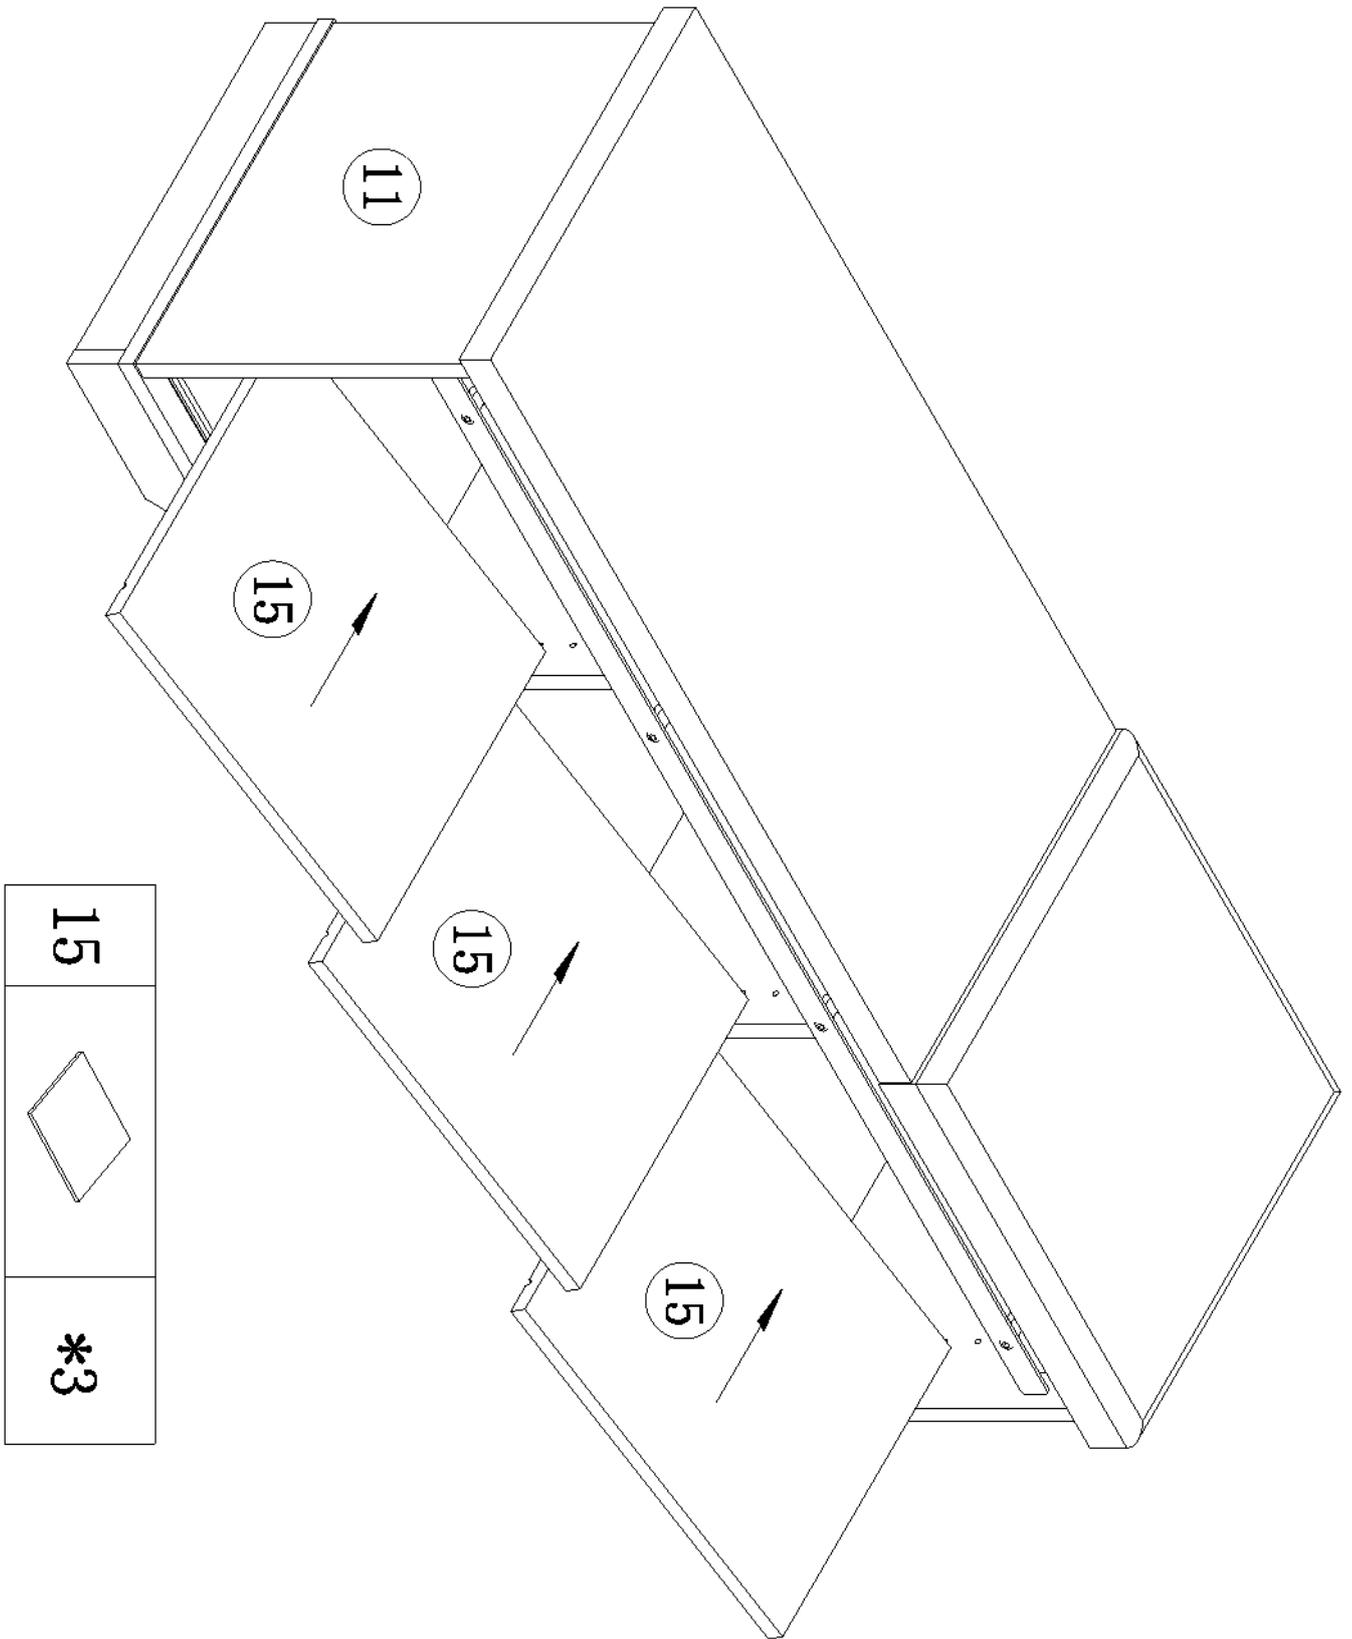


Step 13.

Put on Panel 15 on the metal part M.

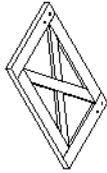
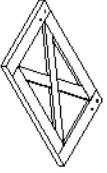
16		*1
17		*1



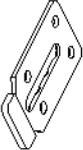
N	 60*32mm	*4
L	 3.5*14mm	*16

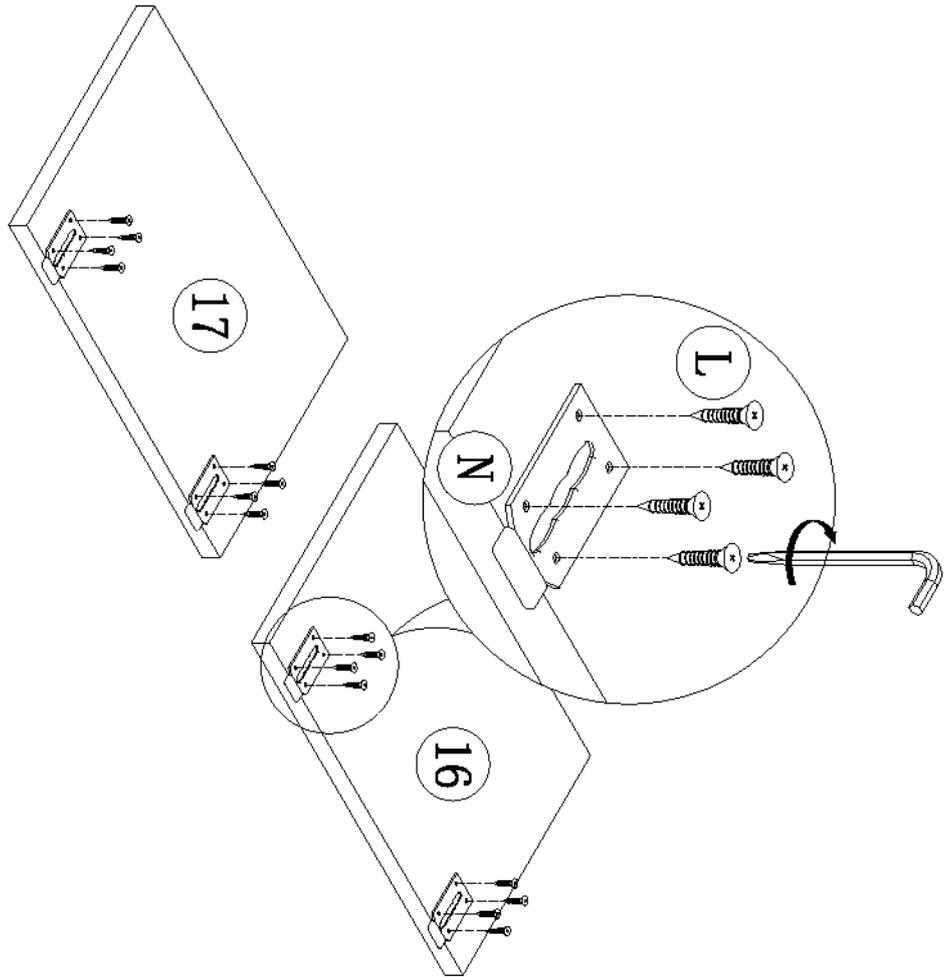





Step 14.

**Fix N on the door Panel 16 (left door),
door Panel 17(right door) with Screw L separately.**

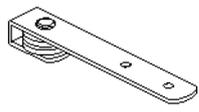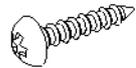O		*4
P	 3.5*14mm	*8

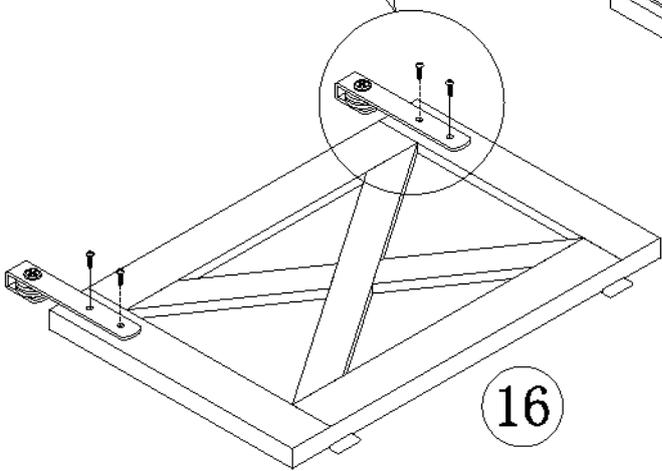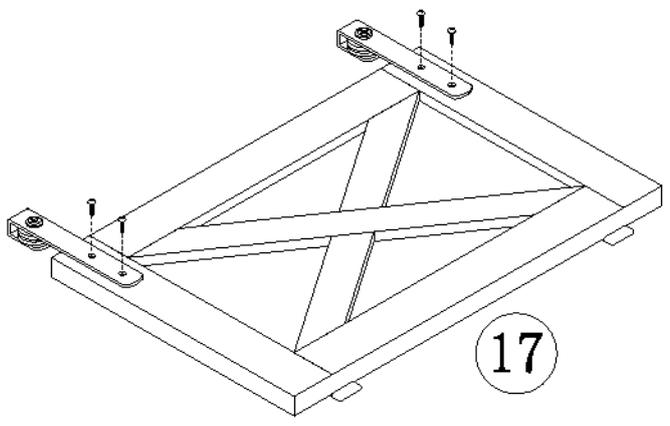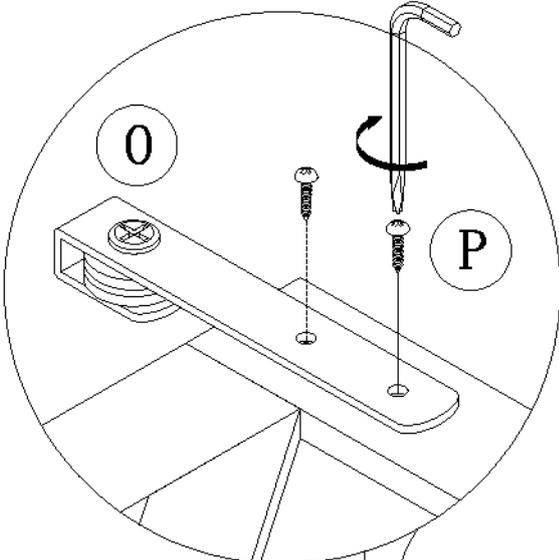


Step 15.
Fix O on the door Panel 16 (left door),
door Panel 17(right door) with Screw P separately.

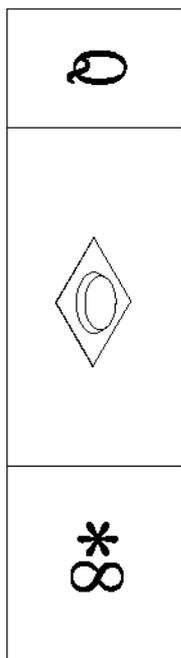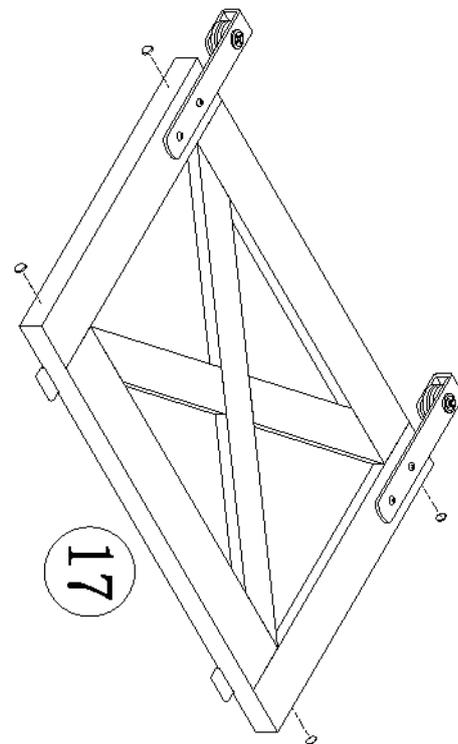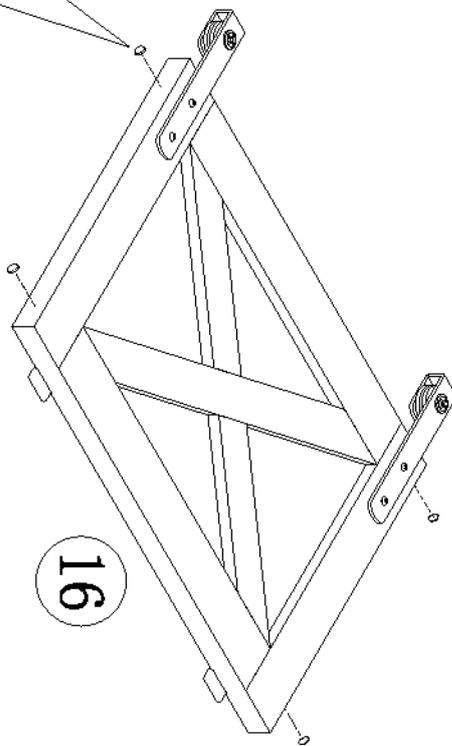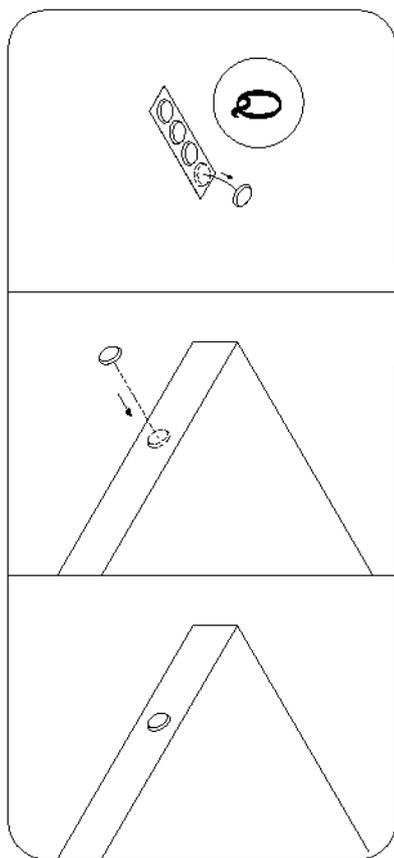

Step 16.


**Paste P on the door Panel 16 (left door),
door Panel 17(right door).**

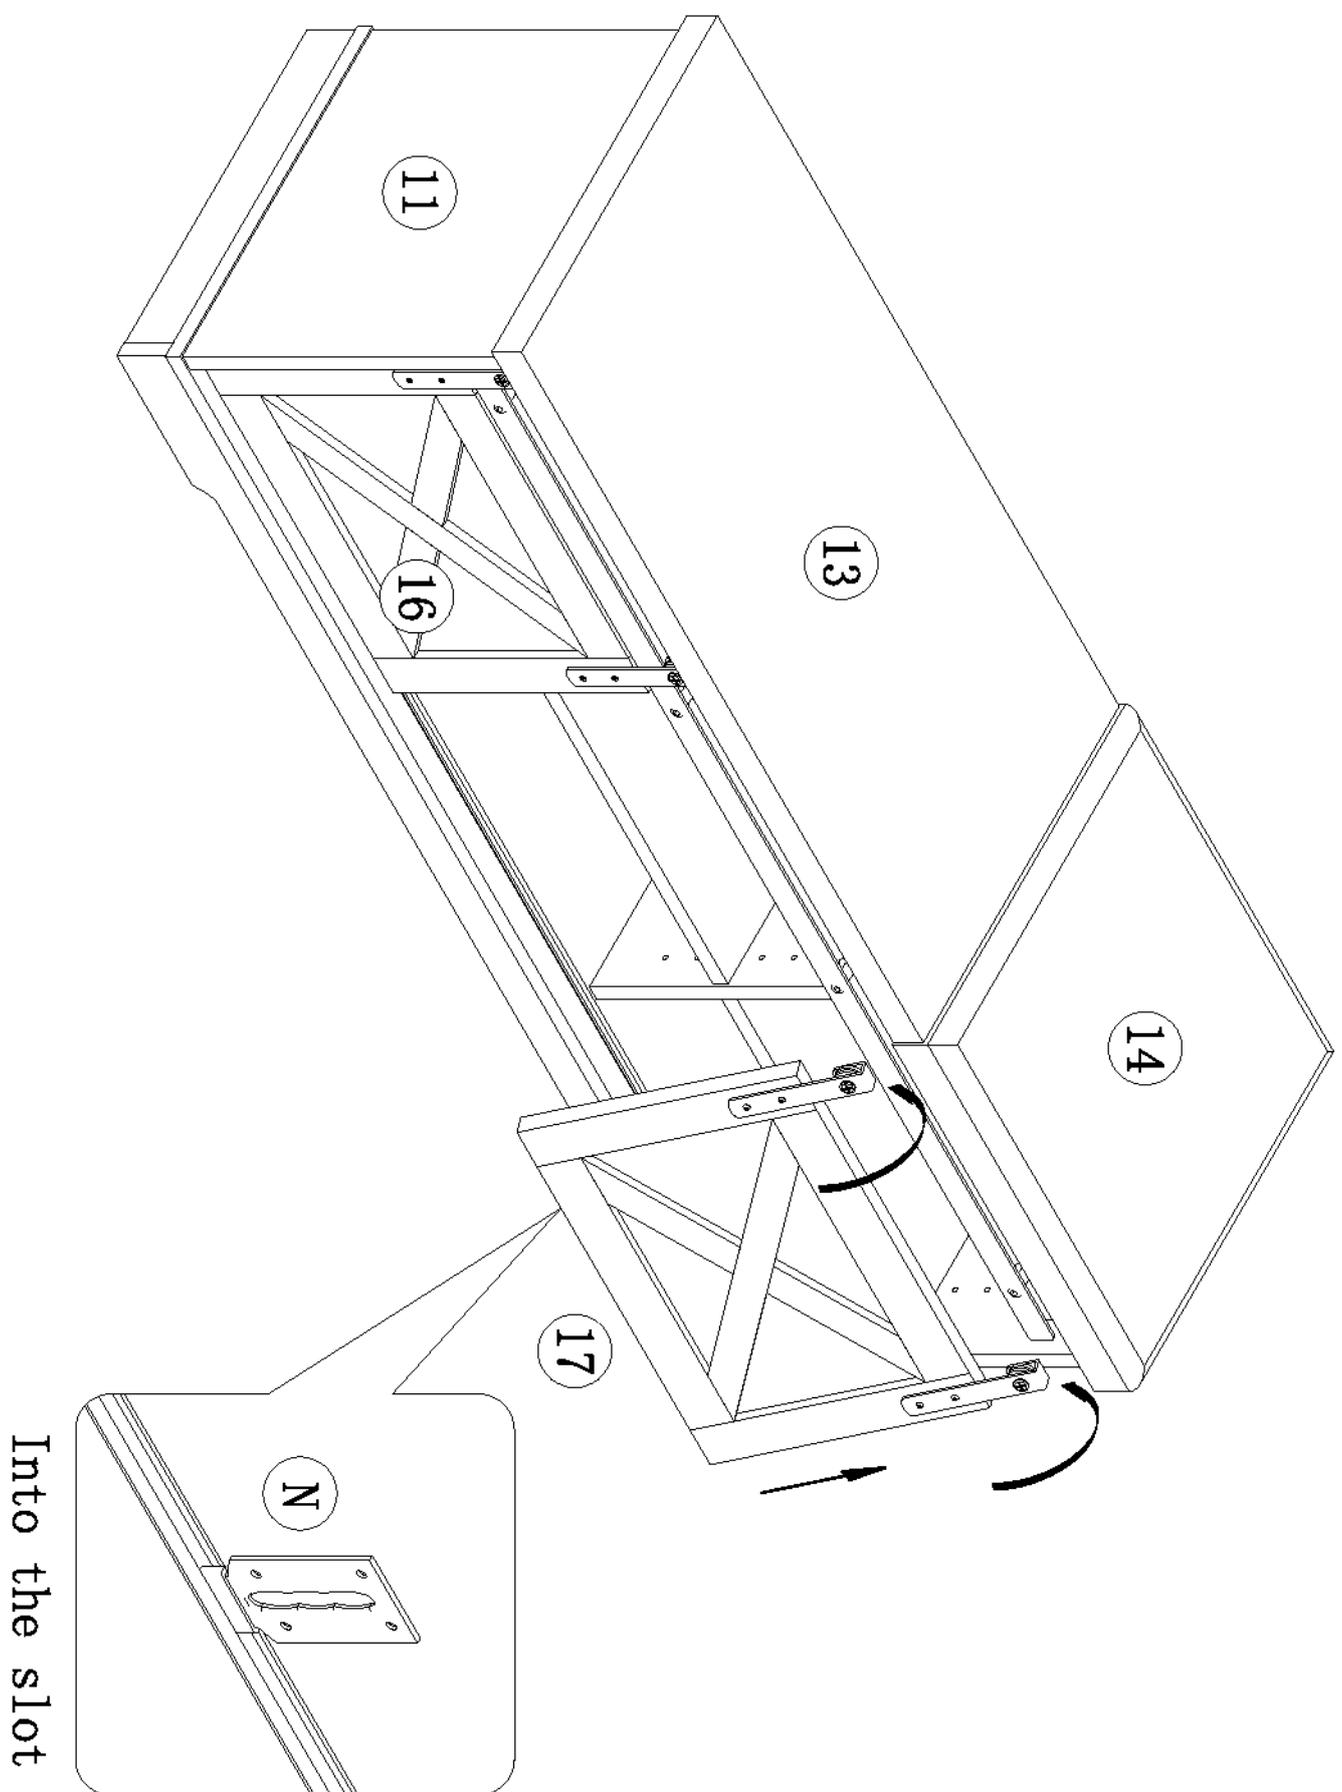

Step 17.

**Hang the door Panel 16 (left door),
door Panel 17(right door) on Iron slide rail F.**

Enjoy Your Life

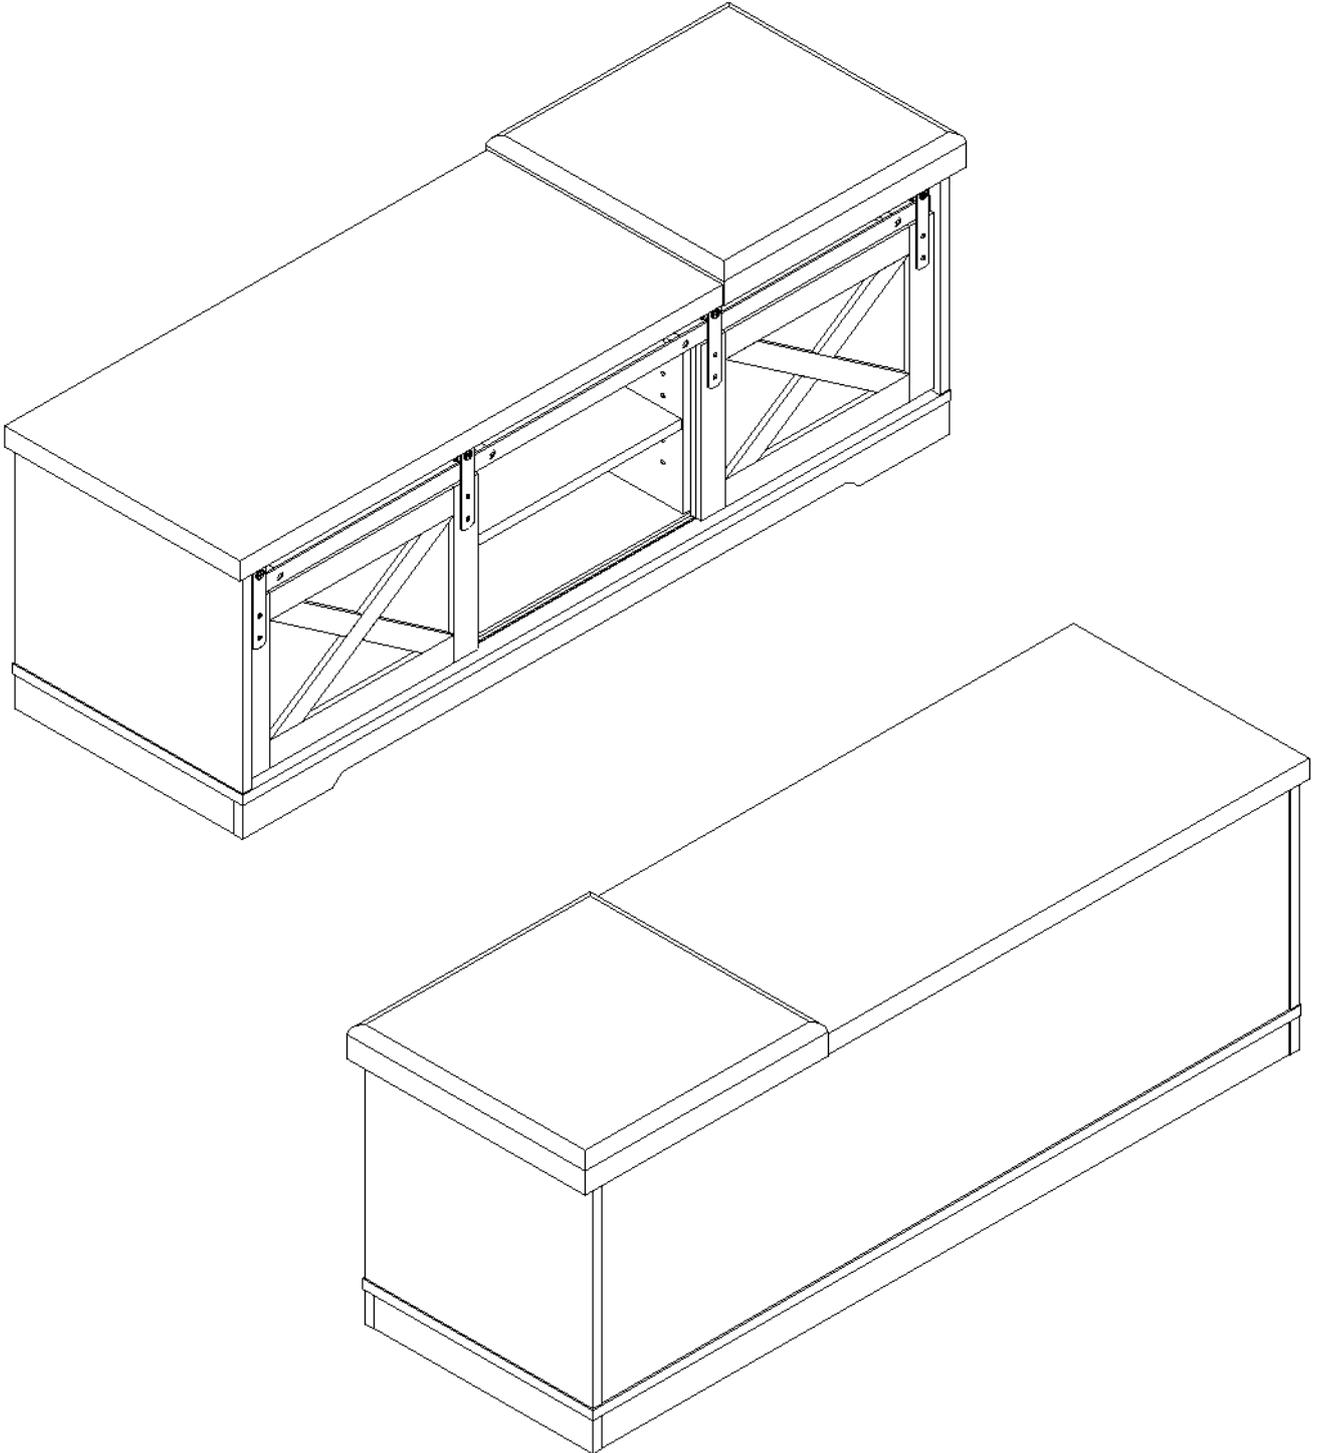

CD-086